

List of preset codes / Liste de codes pré-régulés

DVD Player/Bul-Ray Disc Player

| | | |
|----------|------------|--------------------|
| A | Aiwa | 009 |
| D | Denon | 014, [111]*, 121 |
| H | Hitachi | 010 |
| J | JVC | 006, 011 |
| K | Konka | 012, 013 |
| M | Magnavox | 005 |
| | Mitsubishi | 004 |
| P | Panasonic | 014 |
| | Philips | 005, 015, 016, 017 |
| | Pioneer | 003, 008 |
| S | Sanyo | 018 |
| | Sony | 002, 019, 020 |
| T | Toshiba | 001, 021, 022 |
| Z | Zenith | 023 |

VDP

| | | |
|----------|------------|--------------------|
| D | Denon | 028, 029, 112 |
| M | Magnavox | 026 |
| | Mitsubishi | 028 |
| P | Panasonic | 029, 030 |
| | Philips | 026 |
| | Pioneer | 028, 031 |
| R | RCA | 032 |
| S | Sony | 033, 034, 035, 036 |

VCR

| | | |
|----------|---------------|-----------------------------------|
| A | Admiral | 081 |
| | Aiko | 095 |
| | Aiwa | 009 |
| | Akai | 026, 027, 070, 072, 082, 083, 084 |
| | Alba | 055 |
| | Amstrad | 009 |
| | ASA | 042 |
| | Asha | 087 |
| | Audio Dynamic | 005, 085 |
| | Audiovox | 088 |
| | Beaumarck | 087 |
| | Broksonic | 086, 093 |
| C | Calix | 088 |
| | Candle | 006, 087, 088, 089, 090 |
| | Canon | 049, 057 |
| | Capehart | 025, 055, 056, 071 |
| | Carver | 015 |
| | CCE | 095 |
| | Citizen | 006, 007, 087, 088, 089, 090, 095 |
| | Craig | 007, 087, 088, 091, 115 |

| | | |
|----------|-----------------|--------------------------------------------------------------------------------|
| | Curtis Mathes | 006, 049, 073, 080, 087, 090, 092 |
| | Cybernex | 087 |
| D | Daewoo | 025, 055, 059, 074, 089, 093, 095, 096 |
| | Daytron | 025, 055 |
| | DBX | 005, 085 |
| | Dumont | 053 |
| | Dynatech | 009 |
| E | Electrohome | 001, 088, 097 |
| | Electrohome | 088 |
| | Emerson | 001, 009, 017, 027, 086, 088, 089, 092, 093, 097, 100, 101, 102, 103, 104, 117 |
| F | Fisher | 009, 028, 031, 053, 054, 091, 099, 115 |
| G | GE | 007, 011, 049, 050, 051, 052, 073, 080, 087 |
| | Go Video | 047, 048 |
| | Goldstar | 000, 006, 012, 062, 088 |
| | Gradiente | 094 |
| | Grundig | 042 |
| H | Harley Davidson | 094 |
| | Harman Kardon | 040, 062 |
| | Hi-Q | 091 |
| | Hitachi | 009, 013, 023, 026, 058, [108]*, 109, 110, 111 |
| J | JC Penny | 004, 005, 007, 023, 028, 049, 062, 085, 087, 088 |
| | Jensen | 013, 026 |
| | JVC | 004, 005, 006, 026, 029, 043, 044, 045, 046, 085 |
| K | Kenwood | 004, 005, 006, 026, 029, 033, 045, 085, 090 |
| | Kodak | 088 |
| L | Lloyd | 009, 094 |
| | LXI | 088 |
| M | Magnavox | 015, 016, 042, 049, 063, 106 |
| | Magnin | 087 |
| | Marantz | 004, 005, 006, 015, 042, 049, 085, 090 |
| | Marta | 088 |
| | MEI | 049 |
| | Memorex | 009, 033, 049, 053, 060, 081, 087, 088, 091, 094, 115 |
| | Metz | 123, 124, 125, 126, 127, 128 |
| | MGA | 001, 017, 027, 041, 097 |
| | MGN Technology | 087 |
| | Midland | 011 |
| | Minolta | 013, 023 |
| | Mitsubishi | 001, 003, 008, 013, 014, 017, 027, 029, 039, 040, 041, 045, 097 |
| | Motorola | 081 |
| | Montgomery Ward | 001, 002, 007, 009, 049, 063, 081, 115, 117 |
| | MTC | 009, 087, 094 |

| | | |
|----------|-------------|-----------------------------------------------------------------------------------------------------------------------------|
| | Multitech | 007, 009, 011, 087, 090, 094 |
| N | NAD | 038 |
| | NEC | 004, 005, 006, 018, 026, 029, 045, 061, 062, 085 |
| | Nikko | 088 |
| | Noblex | 087 |
| O | Optimus | 081, 088 |
| | Optonica | 021 |
| P | Panasonic | 024, 049, 064, 066, 067, 068, 069, 107 |
| | Perdio | 009 |
| | Pentax | 009, 013, 023, 058, 090 |
| | Philco | 015, 016, 049 |
| | Philips | 015, 021, 042, 049, 105 |
| | Pilot | 088 |
| | Pioneer | 005, 013, 029, 036, 037, 038, 045, 085 |
| | Portland | 025, 055, 090 |
| | Proscan | 063, 080 |
| | Pulsar | 060 |
| Q | Quartz | 033 |
| | Quasar | 034, 035, 049 |
| R | Radio Shack | 001, 002, 021, 081, 087, 088, 091, 094, 097, 098, 115 |
| | Radix | 088 |
| | Randex | 088 |
| | RCA | 007, 013, 019, 023, 058, 063, 064, 065, 073, 080, 082, 087, 089, 021, 031, 033, 049, 053, 081, 087, 088, 091, 094, 097, 098 |
| | Realistic | 009, 021, 031, 033, 049, 053, 081, 087, 088, 091, 094, 097, 098 |
| | Ricoh | 055 |
| S | Salora | 033, 041 |
| | Samsung | 007, 011, 051, 059, 070, 083, 087, 089, 113 |
| | Sanky | 081 |
| | Sansui | 005, 026, 029, 045, 061, 085, 114 |
| | Sanyo | 032, 033, 053, 087, 091, 115, 116 |
| | SBR | 042 |
| | Scott | 017, 020, 086, 089, 093, 117 |
| | Sears | 013, 023, 028, 031, 033, 053, 054, 088, 091, 098, 099, 115 |
| | Sentra | 055 |
| | Sharp | 001, 002, 021, 097 |
| | Shogun | 087 |
| | Sony | 075, 076, 077, 078, 079, 121, 122 |
| | STS | 023 |
| | Sylvania | 009, 015, 016, 017, 041, 049, 094 |
| | Symphonic | 009, 094 |
| T | Tandy | 009 |
| | Tashiko | 009, 088 |
| | Tatung | 004, 026, 030 |

| | | |
|----------|------------------|------------------------------------------------------------|
| | Teac | 004, 009, 026, 094 |
| | Technics | 024, 049 |
| | TMK | 087, 092 |
| | Toshiba | 013, 017, 020, 041, 059, 089, 098, 099, 117 |
| | Totevision | 007, 087, 088 |
| U | Unirech | 087 |
| V | Vectror Research | 005, 062, 085, 089, 090 |
| | Victor | 005, 045, 046, 085 |
| | Video Concepts | 005, 027, 085, 089, 090 |
| | Videosonic | 007, 087 |
| W | Wards | 013, 021, 023, 087, 088, 089, 091, 094, 097, 118, 119, 120 |
| X | XR-1000 | 094 |
| Y | Yamaha | 004, 005, 006, 026, 062, 085 |
| Z | Zenith | 060, 078, 079 |

Television

| | | |
|----------|---------------|----------------------------------------------------------------------|
| A | Admiral | 045, 121 |
| | Adventura | 122 |
| | Aiko | 054 |
| | Akai | 016, 027, 046 |
| | Alleron | 062 |
| | A-Mark | 007 |
| | Amtron | 061 |
| | Anam | 006, 007, 036 |
| | Anam National | 061, 147 |
| | AOC | 003, 007, 033, 038, 039, 047, 048, 049, 133 |
| | Archer | 007 |
| | Audiovox | 007, 061 |
| B | Bauer | 155 |
| | Belcor | 047 |
| | Bell & Howell | 045, 118 |
| | Bradford | 061 |
| | Brockwood | 003, 047 |
| C | Candle | 003, 030, 031, 032, 038, 047, 049, 050, 122 |
| | Capehart | 003 |
| | Celebrity | 046 |
| | Circuit City | 003 |
| | Citizen | 029, 030, 031, 032, 034, 038, 047, 049, 050, 054, 061, 095, 122, 123 |
| | Concerto | 031, 047, 049 |
| | Colortyme | 003, 047, 049, 135 |
| | Contec | 013, 051, 052, 061 |
| | Cony | 051, 052, 061 |
| | Craig | 004, 061 |
| | Crown | 029 |
| | Curtis Mathes | 029, 034, 038, 044, 047, 049, 053, 095, 118 |

| | | |
|----------|----------------|----------------------------------------------------------------------------------------------------|
| D | Daewoo | 027, 029, 039, 048, 049, 054, 055, 106, 107, 137 |
| | Daytron | 003, 049 |
| | Dimensia | 044 |
| | Dixi | 007, 015, 027 |
| E | Electroband | 046 |
| | Electrohome | 029, 056, 057, 058, 147 |
| | Elta | 027 |
| | Emerson | 029, 051, 059, 060, 061, 062, 118, 123, 124, 139, 148 |
| | Envision | 038 |
| | Etron | 027 |
| F | Fisher | 014, 021, 063, 064, 065, 118 |
| | Formenti | 155 |
| | Fortress | 012 |
| | Fujitsu | 004, 062 |
| | Funai | 004, 062 |
| | Futuretech | 004 |
| G | GE | 020, 036, 037, 040, 044, 058, 066, 088, 119, 120, 125, 147 |
| | Goldstar | 000, 015, 029, 031, 039, 048, 051, 056, 057, 067, 068, 069, 116 |
| | Grundy | 062 |
| H | Hitachi | 029, 031, 051, 052, 070, 111, 112, 113, 124, [134]* |
| | Hitachi Pay TV | 151 |
| I | Infinity | 017, 071 |
| J | Janeil | 122 |
| | JBL | 017, 071 |
| | JC Penny | 020, 034, 039, 040, 041, 044, 048, 050, 058, 066, 069, 076, 088, 090, 095, 125, 136, 159 |
| | JCB | 046 |
| | JVC | 019, 051, 052, 072, 073, 091, 117, 126 |
| K | Kawasho | 018, 046 |
| | Kenwood | 038, 056, 057 |
| | Kloss | 010, 032 |
| | Kloss Novabeam | 005, 122, 127, 131 |
| | KTV | 074, 123 |
| L | Loewe | 071 |
| | logik | 144 |
| | Luxman | 031 |
| | LXI | 008, 014, 017, 024, 040, 044, 063, 071, 075, 076, 077, 118, 125 |
| M | Magnavox | 005, 010, 017, 030, 033, 038, 050, 056, 071, 078, 079, 085, 089, 108, 109, 110, 127, 131, 132, 145 |
| | Marantz | 015, 017, 071, 080 |
| | Matsui | 027 |
| | Memorex | 014, 027, 045, 083, 118, 144 |
| | Metz | 160, 161, 162, 163 |

| | |
|-------------------|---------------------------------------------------------------------------------------------------------|
| MGA | 001, 039, 048, 056, 057, 058, 065, 081, 083 |
| Midland | 125 |
| Minutz | 066 |
| Mitsubishi | 001, 016, 039, 048, 056, 057, 058, 065, 081, 082, 083, 105 |
| Montgomery Ward | 011, 020, 144, 145, 146 |
| Motorola | 121, 147 |
| MTC | 031, 034, 039, 048, 095 |
| NAD | 008, 075, 076, 128 |
| National | 002, 036, 061, 147 |
| National Quenties | 002 |
| NEC | 031, 038, 039, 048, 057, 084, 086, 135, 147 |
| Nikko | 054 |
| NTC | 054 |
| Optimus | 128 |
| Optonica | 011, 012, 093, 121 |
| Orion | 004, 139 |
| Panasonic | 002, 009, 017, 036, 037, 071, 141, 143, 147 |
| Philco | 005, 010, 030, 050, 051, 056, 079, 085, 127, 131, 132, 145, 147 |
| Philips | 005, 015, 017, 050, 051, 056, 078, 087, 088, 089, 131, 132, 147 |
| Pioneer | 124, 128, 142 |
| Portland | 054 |
| Price Club | 095 |
| Proscan | 040, 044, 125 |
| Proton | 035, 051, 092, 129 |
| Pulsar | 042 |
| Quasar | 036, 037, 074, 141 |
| Radio Shack | 011, 044, 063, 093, 118 |
| RCA | 040, 044, 125, 130, 137, 151, 152 |
| Realistic | 014, 063, 093, 118 |
| Saisho | 027 |
| Samsung | 003, 015, 034, 053, 055, 057, 094, 095, 136, 153 |
| Sansui | 139 |
| Sanyo | 013, 014, 021, 022, 063, 064, 081, 096 |
| SBR | 015 |
| Schneider | 015 |
| Scott | 062 |
| Sears | 008, 014, 021, 022, 023, 024, 025, 040, 052, 057, 062, 063, 064, 065, 073, 075, 076, 097, 098, 125, 159 |
| Sharp | 011, 012, 013, 026, 093, 099, 100, 104, 121 |
| Siemens | 013 |
| Signature | 045, 144 |
| Simpson | 050 |
| Sony | 043, 046, 138, 146, 150 |
| Soundesign | 030, 050, 062 |
| Spectricon | 007, 033 |

| | |
|----------------|----------------------------------------------------------------------|
| Squareview | 004 |
| Supre-Macy | 032, 122 |
| Supreme | 046 |
| Sylvania | 005, 010, 017, 030, 078, 079, 085, 089, 101, 127, 131, 132, 145, 155 |
| Symphonic | 004, 148 |
| Tandy | 012, 121 |
| Tatung | 036, 124 |
| Technics | 037 |
| Teknika | 001, 030, 032, 034, 052, 054, 078, 083, 095, 144, 156, 157 |
| Tera | 035, 129 |
| THOMSON | 165, 166 |
| Toshiba | 008, 014, 034, 063, 075, 076, 095, 097, 136, 158, 159 |
| Universal | 020, 066, 088 |
| Victor | 019, 073, 126 |
| Video Concepts | 016 |
| Viking | 032, 122 |
| Wards | 005, 045, 066, 078, 085, 088, 089, 093, 102, 103, 131, 132, 148 |
| Zenith | 042, 114, 115, 140, 144, 149 |
| Zonda | 007 |

Cable

| | |
|--------------------|-------------------------|
| ABC | 006, [007]*, 008, 009 |
| Archer | 010, 011 |
| Century | 011 |
| Citizen | 011 |
| Colour Voice | 012, 013 |
| Comtronic | 014 |
| Eastern | 015 |
| Garrard | 011 |
| Gemini | 030, 033, 034 |
| General Instrument | 030, 031, 032 |
| Hytex | 006 |
| Jasco | 011 |
| Jerrold | 009, 016, 017, 026, 032 |
| Magnavox | 018 |
| Movie Time | 019 |
| NSC | 019 |
| Oak | 000, 006, 020 |
| Panasonic | 001, 005 |
| Philips | 011, 012, 013, 018, 021 |
| Pioneer | 002, 003, 022 |
| RCA | 029 |
| Regency | 015 |
| Samsung | 014, 023 |
| Scientific Atlanta | 004, 024, 025 |
| Signal | 014 |
| SL Marx | 014 |
| Starcom | 009 |

| | |
|----------------|----------|
| Stargate | 014 |
| Teleview | 014 |
| Tocom | 007, 016 |
| TV86 | 019 |
| Unika | 011 |
| United Artists | 006 |
| Universal | 010, 011 |
| Viewstar | 018, 019 |
| Zenith | 027, 028 |

Satellite Receiver

| | |
|---------------------|-------------------------|
| Alphastar | 054 |
| Chaparrali | 035, 036 |
| Dishnet | 053 |
| Drake | 037, 038 |
| Echostar Dish | 062, 066 |
| GE | 048, 055, 056 |
| General Instruments | 039, 040, 041 |
| Grundig | 070, 071, 072, 073 |
| Hitachi | 058, 059 |
| Hughes Networkr | 063, 064, 065, 069 |
| JVC | 057 |
| Kathrein | 074, 075, 076, 083 |
| Magnavoxl | 060 |
| Nokia | 070, 080, 084, 085, 086 |
| Philips | 060 |
| Primestar | 051 |
| Proscan | 048, 055, 056 |
| RCA | 048, 055, 056, 068 |
| Realistic | 042 |
| Sierra I | 036 |
| Sierra II | 036 |
| Sierra III | 036 |
| Sony | 049, 067 |
| STS1 | 043 |
| STS2 | 044 |
| STS3 | 045 |
| SRS4 | 046 |
| Technisat | 077, 078, 079, 081, 082 |
| Toshiba | 047, 050 |
| Uniden | 061 |

CD Player

| | |
|----------|--------------------|
| Aiwa | 001, 035, 043 |
| Burmster | 002 |
| Carvery | 003, 035 |
| Denon | [111]*, 044 |
| Emerson | 004, 005, 006, 007 |
| Fisher | 003, 008, 009, 010 |
| JVC | 018, 019 |

| | |
|----------|-------------------------|
| Kenwood | 011, 012, 013, 014, 017 |
| Magnavox | 006, 015, 035 |
| Marantz | 016, 028, 035 |
| MCS | 016, 024 |
| Onkyo | 025, 027 |
| Optimus | 017, 020, 021, 022, 023 |
| Philips | 014, 032, 033, 035 |
| Pioneer | 006, 022, 030 |
| Sears | 006 |
| Sony | 023, 031 |
| Teac | 002, 009, 028 |
| Technics | 016, 029, 036 |
| Wards | 035, 037 |
| Yamaha | 038, 039, 040, 041 |
| Zenith | 042 |

DVD preset codes / Codes pré-réglés DVD

| | 111 (default / défaut) | 014 | |
|---------------------------------|------------------------|------------|----------|
| DENON Model No. / Modèle numéro | DVD-555 | DVD-2900 | DVD-800 |
| | DVD-556 | DVD-2910 | DVD-1600 |
| | DVD-557 | DVD-2930CI | DVD-2000 |
| | DVD-558 | DVD-3800 | DVD-2500 |
| | DVD-755 | DVD-3910 | DVD-3000 |
| | DVD-756 | DVD-3930CI | DVD-3300 |
| | DVD-757 | DVD-5900 | |
| | DVD-758 | DVD-5910 | |
| | DVD-900 | DVD-5910CI | |
| | DVD-910 | DVD-9000 | |
| | DVD-955 | DVD-2500BT | |
| | DVD-1000 | DVD-3800BD | |
| | DVD-1200 | DVM-715 | |
| | DVD-1500 | DVM-735 | |
| | DVD-1710 | DVM-745 | |
| | DVD-1720 | DVM-1800 | |
| | DVD-1730 | DVM-1805 | |
| | DVD-1740 | DVM-1815 | |
| | DVD-1910 | DVM-1835 | |
| | DVD-1920 | DVM-1845 | |
| DVD-1930CI | DVM-2815 | | |
| DVD-1940CI | DVM-2845CI | | |
| DVD-2200 | DVM-4800 | | |
| DVD-2800 | | | |
| DVD-2800II | | | |

[]*: Preset codes set upon shipment from the factory.
 : Les codes pré-réglés diffèrent en fonction de la livraison de l'usine.