

# DENON

## プリセットコード一覧表 / List of Preset Codes / Liste von voreingestellten Codes / Liste des codes pré-réglés / Lista dei codici pre-regolati / Lista de Códigos Pre-ajustados / Lijst van vooringestelde codes / Förteckning över förinställda koder / 預選代碼一覽表 / 预选代码一覽表

### ケーブルのセットアップコード

SETUP CODES FOR CABLE  
SETUP-CODES FÜR KABEL  
CODES DE REGLAGE POUR CABLE  
REGOLAZIONE CODICI PER CAVI  
AJUSTAR CÓDIGOS PARA CABLE  
INSTELCODES VOOR KABEL  
INSTÄLLNINGSKODER FÖR KABEL-TV-MOTTAGARE

線纜設置代碼  
线纜設置代碼

### A

ABC .....0028, 0030, 0034, 0035, 0038,  
0040, 0041, 0044  
Allegro .....0180, 0342  
Antronix .....0049  
Archer .....0049, 0180, 0824

### B

Belcor .....0083  
Bell & Howell .....0041

### C

Cable Star .....0083  
Cabletenna .....0049  
Cableview .....0049  
Century .....0180  
Citizen .....0180, 0342  
Colour Voice .....0052  
Comtronics .....0067  
Contec .....0046

### D

Daehan .....0805  
Daeryung .....0035

### E

Eastern .....0029  
Emerson .....0824  
Everquest .....0042, 0067

### F

Focus .....0427

### G

GC Electronics .....0083  
Garrard .....0180  
Gemini .....0042  
General Instrument .....0038, 0303, 0503, 0837  
GoldStar .....0067, 0171  
Goodmind .....0824

### H

Hamlin .....0036, 0047, 0061, 0286  
Hitachi .....0038

Hytex .....0034

### J

Jasco .....0042, 0180, 0342  
Jerrold .....0030, 0038, 0039, 0041, 0042,  
0303, 0503, 0837

### L

LG Alps .....0806

### M

Magnavox .....0041  
Memorex .....0027  
Movie Time .....0090

### N

NAP .....0034  
NSC .....0090  
Now .....0803

### O

Oak .....0034, 0046  
Optimus .....0048

### P

Pacific .....0705  
Panasonic .....0027, 0048, 0134  
Paragon .....0027  
Philips .....0052, 0180  
Pioneer .....0171, 0560  
Popular Mechanics .....0427  
Proscan .....0048  
Pulsar .....0027

### Q

Quasar .....0027

### R

RCA .....0048  
Radio Shack .....0042, 0342, 0824, 0910  
Recoton .....0427  
Regal .....0047, 0286  
Regency .....0029  
Rembrandt .....0038  
Runco .....0027

### S

SL Marx .....0067  
Samsung .....0027, 0067, 0171, 0705, 0729,  
0803, 0804, 0805, 0806, 0807  
Scientific Atlanta .....0035, 0044, 0504, 0904  
Seawoo .....0807  
Sharp .....0340  
Signal .....0042, 0067  
Signature .....0038  
Sprucer .....0048  
Starcom .....0030, 0042

Stargate .....0042, 0067, 0824

Starquest .....0042

Sylvania .....0028

### T

TV86 .....0090  
Taihan .....0805  
Tandy .....0285  
Televue .....0067  
Texscan .....0028  
Tocom .....0039, 0040  
TongKook .....0804  
Toshiba .....0027  
Tusa .....0042

### U

Unika .....0049, 0180  
United Artists .....0034  
Universal .....0049, 0083, 0180, 0218

### V

Viewstar .....0090, 0285

### Z

Zenith .....0027, 0035, 0042, 0552  
Zentek .....0427

### CDプレーヤーのセットアップコード

SETUP CODES FOR CD PLAYERS  
SETUP-CODES FÜR CD-PLAYER  
CODES DE REGLAGE POUR LECTEURS CD  
REGOLAZIONE CODICI PER LETTORE CD  
AJUSTAR CÓDIGOS PARA LOS REPRODUCTORES DE CD  
INSTELCODES VOOR CD-SPELERS  
INSTÄLLNINGSKODER FÖR CD-SPELARE

鐳射唱盤播放機設置代碼

鐳射唱盤播放机設置代碼

### A

ADC .....0045  
Adcom .....0182, 0261  
Aiwa .....0039, 0151, 0184  
Akai .....0183  
Audio Alchemy .....0221  
Audio-Technica .....0197

### B

BSR .....0221, 0272  
Burmester .....0447

### C

California Audio Labs .....0056  
Carrera .....0221  
Carver .....0184, 0206  
Craig .....0642  
Crown .....0149  
Curtis Mathes .....0056

### D

DAK .....0272  
DBX .....0281  
DKK .....0027  
Denon .....0030, 0061, 0900  
Dynamic Bass .....0206

### E

Emerson .....0182, 0191, 0332, 0496

### F

Fisher .....0115, 0201, 0206, 0369

### G

GE .....0036  
Garrard .....0272, 0307, 0447, 0452  
Genexxa .....0059, 0191, 0332  
GoldStar .....0444

### H

Harman/Kardon .....0184, 0200, 0453  
Hitachi .....0059, 0182

### I

Inkel .....0141, 0207, 0223

### J

JVC .....0099, 0682

### K

Kenwood .....0055, 0064, 0217, 0708, 0853  
Kodak .....0314  
Krell .....0184  
Kyoocera .....0045

### L

LXI .....0332  
Linn .....0184  
Luxman .....0120

### M

MCS .....0056, 0070  
MGA .....0110  
MTC .....0447  
Magnavox .....0184, 0332, 0553  
Marantz .....0056, 0184, 0207  
McIntosh .....0314  
Mission .....0184  
Mitsubishi .....0110

### N

NEC .....0071, 0261  
NSM .....0184  
Nakamichi .....0174  
Nikko .....0191, 0197, 0201

### O

Onkyo .....0128, 0895  
Optimus .....0027, 0059, 0064, 0114, 0172,  
0202, 0206, 0221, 0223, 0307,  
0332, 0369, 0447, 0453, 0495

### P

Panasonic .....0056, 0330, 0394, 0779  
Parasound .....0221, 0447  
Philips .....0184, 0301, 0314, 0653  
Pioneer .....0059, 0332, 0495  
Proscan .....0080  
Proton .....0184

### Q

QED .....0184  
Quasar .....0056

### R

RCA .....0036, 0080, 0182, 0206, 0332  
Realistic .....0182, 0191, 0202, 0206, 0207,  
0447  
Rotel .....0184, 0447

### S

SAE .....0184  
STS .....0045  
Sansui .....0184, 0229, 0332  
Sanyo .....0114, 0206  
Scott .....0182, 0191, 0332  
Sears .....0332

Sharp .....0064, 0207, 0288, 0888  
 Sherwood .....0141, 0207, 0223, 0453  
 Shure .....0070  
 Sony .....0027, 0517  
 Soundesign .....0172, 0452  
 Sylvania .....0184

**T**

Tascam .....0447  
 Teac .....0201, 0207, 0447  
 Technics .....0056, 0234, 0330

**V**

Vector Research .....0221, 0444  
 Victor .....0099

**W**

Wards .....0080, 0184

**Y**

Yamaha .....0063, 0197, 0214, 0288

**Z**

Zenith .....0642

**カセットプレーヤーのセットアップコード**  
**SETUP CODES FOR CASSETTE PLAYERS**  
**SETUP-CODES FÜR CASSETTEN-PLAYER**  
**CODES DE REGLAGE POUR LECTEURS DE CASSETTE**  
**REGOLAZIONE CODICI PER RIPRODUTTORE A CASSETTE**  
**AJUSTAR CÓDIGOS PARA REPRODUCTORES DE CASSETTE**  
**INSTELCODES VOOR CASSETTESPELERS**  
**INSTÄLLNINGSKODER FÖR KASSETTBANDSPELARE**  
 卡式錄音座設置代碼  
 卡式录音座设置代码

**A**

Aiwa .....0056, 0224

**C**

Carver .....0056

**D**

Denon .....0103

**H**

Harman/Kardon .....0056, 0209

**I**

Inkel .....0097

**J**

JVC .....0271, 0300

**K**

Kenwood .....0097

**M**

Magnavox .....0056  
 Marantz .....0056

**O**

Onkyo .....0162, 0309  
 Optimus .....0054, 0247

**P**

Panasonic .....0256  
 Philips .....0056  
 Pioneer .....0054, 0126, 0247

**S**

Sansui .....0056  
 Sony .....0197, 0270, 0318

**T**

Technics .....0256

**V**

Victor .....0271, 0300

**W**

Wards .....0054

**Y**

Yamaha .....0121, 0124

**DATのセットアップコード**  
**SETUP CODES FOR DAT**  
**SETUP-CODES FÜR DAT**  
**CODES DE REGLAGE POUR DAT**  
**REGOLAZIONE CODICI PER DAT**  
**AJUSTAR CÓDIGOS PARA DAT**  
**INSTELCODES VOOR DAT**  
**INSTÄLLNINGSKODER FÖR DAT**  
 數碼磁帶設置代碼  
 数码磁带设置代码

**C**

Carver .....0185

**D**

Denon .....0058

**H**

Harman/Kardon .....0185

**M**

Magnavox .....0185  
 Marantz .....0185

**P**

Philips .....0185  
 Pioneer .....0046

**S**

Sony .....0120

**レーザーディスクのセットアップコード**  
**SETUP CODES FOR LASER DISC**  
**SETUP-CODES FÜR LASER-DISCS**  
**CODES DE REGLAGE POUR DISQUE LASER**  
**REGOLAZIONE CODICI PER DISCHI LASER**  
**AJUSTAR CÓDIGOS PARA DISCOS LÁSER**  
**INSTELCODES VOOR LASERDISC**  
**INSTÄLLNINGSKODER FÖR LASER DISC-SPELARE**  
 鐳射影碟播放機設置代碼  
 鐳射影碟播放机设置代码

**A**

Akai .....0625  
 Audio-Technica .....0086, 0228, 0231

**C**

Carver .....0221

**D**

Denon .....0086, 0199, 0231  
 Disco Vision .....0050

**F**

Funai .....0611

**G**

GoldStar .....0199

**H**

Harman/Kardon .....0221  
 Hitachi .....0050  
 Hong Deng .....0569

**I**

Idall .....0622

**K**

Kebao .....0608

**M**

Magnavox .....0221  
 Marantz .....0221  
 Mitsubishi .....0086

**N**

NAD .....0086

**P**

Panasonic .....0231, 0523  
 Philips .....0221  
 Pioneer .....0050, 0086

**Q**

Quasar .....0231

**R**

RCA .....0100  
 Rowa .....0568

**S**

SMC .....0623  
 Sega .....0050  
 Sharp .....0624  
 Shinco .....0567  
 Sony .....0220, 0228, 0610, 0616  
 Super .....0608

**T**

Technics .....0231  
 Theta Digital .....0221  
 Toshiba .....0626

**DBSのセットアップコード**  
**SETUP CODES FOR SATELLITE**  
**SETUP-CODES FÜR SATELLITEN**  
**CODES DE REGLAGE POUR SATELITE**  
**REGOLAZIONE CODICI PER SATELLITE**  
**AJUSTAR CÓDIGOS PARA SATELITE**  
**INSTELCODES VOOR SATELLIET**  
**INSTÄLLNINGSKODER FÖR SATELLITMOTTAGARE**  
 衛星設置代碼  
 卫星设置代码

**A**

AlphaStar .....0799

**D**

DX Antenna .....0779  
 Dae Young .....0762  
 Daeryung .....0423

**E**

Echostar .....0423, 0802  
 Expressvu .....0802

**G**

General Instrument .....0388, 0654, 0896

**H**

HTS .....0802  
 Hitachi .....0516, 0846  
 Hughes Network Systems .....0776  
 Hung Chang .....0759  
 Hyundai .....0785

**J**

JVC .....0519, 0532, 0533, 0802  
 Jerrold .....0388, 0654  
 Jiwon .....0391

**K**

Kabil .....0764

**M**

Magnavox .....0749, 0751  
 Marantz .....0227  
 Memorex .....0751  
 Mitsubishi .....0518

**N**

NEC .....0523, 0526, 0534, 0535  
 Next Level .....0896  
 Now .....0784

**P**

Panasonic .....0367, 0527, 0728, 0766  
 Pantech .....0774  
 Philips .....0227, 0749, 0751  
 Pioneer .....0689  
 Primestar .....0388, 0654  
 Proscan .....0593

**R**

RCA .....0170, 0593, 0882  
 Radio Shack .....0593, 0896

**S**

Samsung .....0800  
 Sanyo .....0520  
 Sharp .....0521  
 Sony .....0302, 0367, 0513, 0516, 0518,  
 0519, 0520, 0521, 0523, 0526,  
 0527, 0666, 0688

Star Choice .....0896

**T**

Tae Kwang .....0760  
 Toshiba .....0513, 0817

**U**

Uniden .....0749, 0751

**V**

VTech .....0348  
 Victor .....0513, 0519, 0520, 0521, 0526,  
 0527, 0532, 0533, 0534, 0535

**Z**

Zenith .....0883

**ミニディスクのセットアップコード**  
**SETUP CODES FOR MINIDISC (MD)**  
**SETUP-CODES FÜR MINIDISCS (MD)**  
**CODES DE REGLAGE POUR MINIDISC(MD)**  
**REGOLAZIONE CODICI PER MINIDISCO (MD)**  
**AJUSTAR CÓDIGOS PARA MINIDISCOS(MD)**  
**INSTELCODES VOOR MINIDISC(MD)**  
**INSTÄLLNINGSKODER FÖR MD-SPELARE**  
 迷你磁碟播放機設置代碼  
 迷你磁碟播放机设置代码

**D**

Denon .....0900

**K**

Kenwood .....0708, 0853

**O**

Onkyo .....0895

**S**

Sharp .....0888  
 Sony .....0517

テレビのセットアップコード  
**SETUP CODES FOR TELEVISION**  
**SETUP-CODES FÜR FERNSEHGERÄTE**  
**CODES DE REGLAGE POUR TELEVISION**  
**REGOLAZIONE CODICI PER TELEVISIONE**  
**AJUSTAR CÓDIGOS PARA TELEVISIÓN**  
**INTEL CODES VOOR TELEVISIE**  
**INSTÄLLNINGSKODER FÖR TV-APPARATER**  
 電視機設置代碼  
 电视机設置代碼

**A**

A-Mark .....0030  
 AOC.....0030, 0046, 0057, 0212  
 Admiral .....0120  
 Adventura .....0073  
 Aiko .....0119  
 Akai .....0057  
 Alaron .....0206, 0243  
 Allegro.....0747, 0801  
 Ambassador .....0204  
 Ampro .....0778  
 Anam .....0030, 0031, 0036, 0095, 0188,  
 0207, 0277, 0452, 0453  
 Anam National .....0082, 0188, 0277, 0452  
 Archer .....0030  
 Audinac .....0418  
 Audio-Technica .....0027, 0063, 0080, 0120, 0172,  
 0177, 0183, 0187, 0188, 0193,  
 0197, 0213, 0403, 0451  
 Audiovox.....0030, 0119, 0207, 0478, 0650  
 Aumark .....0087

**B**

Baysonic .....0207  
 Belcor .....0046  
 Bell & Howell.....0043, 0181  
 Blaupunkt .....0581  
 Bradford .....0207  
 Brockwood .....0046  
 Broksonic .....0030, 0263, 0453, 0490

**C**

CXC .....0207  
 Candle .....0057, 0073, 0083, 0213  
 Carnivale .....0057  
 Carver .....0081, 0197  
 Celebrity .....0027  
 Cinal .....0119, 0478  
 Citizen .....0057, 0073, 0083, 0087, 0119,  
 0213, 0307  
 Clairtone .....0212  
 Concerto .....0083  
 Contec .....0207, 0212  
 Craig .....0188, 0207  
 Crosley .....0081  
 Crown .....0207  
 Curtis Mathes .....0043, 0057, 0074, 0078, 0081,  
 0083, 0087, 0120, 0172, 0181,  
 0193, 0478, 0493, 1174, 1374

**D**

Daewoo .....0046, 0093, 0119, 0181, 0418,  
 0429, 0478, 0650, 0651  
 Daytron .....0046  
 Denon .....0172  
 Dumont .....0044, 0046

Dwin .....0747, 0801

**E**

Ectec .....0418  
 Electrobond .....0027, 0212  
 Electrohome .....0436  
 Emerson .....0046, 0181, 0204, 0205, 0206,  
 0207, 0212, 0263, 0307, 0490,  
 0651, 0650  
 Envision .....0057  
 Etron .....0036, 0310

**F**

Fisher .....0181, 0186  
 Fortress .....0120  
 Fujitsu .....0206  
 Funai .....0198, 0206, 0207, 0291, 0369  
 Futurtech .....0207

**G**

GE .....0048, 0054, 0074, 0078, 0082,  
 0120, 0205, 0478, 1174, 1374  
 General .....0213  
 Gibraltar .....0044, 0046, 0057  
 Go Video .....0087  
 GoldStar .....0028, 0029, 0046, 0057, 0083,  
 0205, 0310, 0436, 0484, 0494  
 Gradiente .....0080, 0083, 0197  
 Grundig .....0562  
 Grunpy .....0206, 0207

**H**

Hallmark .....0205  
 Harley Davidson .....0206  
 Harman/Kardon .....0081  
 Harvard .....0095, 0207  
 Hitachi.....0083, 0172, 0178, 0436, 0603

**I**

Infinity .....0081  
 Inkel.....0598  
 Inteq .....0044

**J**

JBL .....0081  
 JCB .....0027  
 JVC .....0063, 0080, 0096, 0121, 0187  
 Janeil .....0073

**K**

KEC .....0207  
 KTV .....0057, 0207, 0212, 0307  
 Kamp .....0243  
 Kawasho .....0243  
 Kenwood .....0046, 0057  
 Kloss .....0073

**L**

LG .....0083  
 LXI .....0044, 0074, 0081, 0181, 0183,  
 0205, 1374  
 Logik .....0043  
 Luxman .....0083

**M**

MEI .....0212  
 MGA .....0046, 0057, 0177, 0205  
 MTC .....0046, 0057, 0083, 0087, 0212,  
 0243  
 Magnavox .....0047, 0057, 0063, 0081, 0123,  
 0206, 0213, 0214  
 Majestic .....0043

Marantz .....0057, 0081  
 Maruman .....0418  
 Matsushita .....0078, 0277  
 Megatron .....0030, 0172, 0205  
 Memorex .....0043, 0083, 0087, 0177, 0181,  
 0205, 0277  
 Midland .....0044, 0074, 0078  
 Minutz .....0048  
 Mitsubishi .....0046, 0120, 0177, 0205  
 Motorola .....0082, 0120  
 Multitech .....0207

**N**

NAD.....0183, 0193, 0205  
 NEC .....0046, 0057, 0063, 0083, 0197,  
 0524  
 NTC .....0119  
 National .....0253  
 Nicamagic .....0243  
 Nikko .....0044, 0057, 0074, 0119, 0181,  
 0183, 0205, 1374  
 Nisato .....0418  
 Noshi .....0045

**O**

Onwa .....0207  
 Optimus .....0181, 0193, 0277  
 Optonica .....0120, 0192  
 Orion .....0206, 0263, 0490

**P**

Panasonic .....0028, 0074, 0078, 0080, 0081,  
 0082, 0087, 0120, 0172, 0177,  
 0181, 0183, 0188, 0192, 0205,  
 0253, 0277, 1374  
 Penney .....0029, 0030, 0045, 0046, 0048,  
 0054, 0057, 0074, 0078, 0083,  
 0087, 0183, 0205, 1374  
 Philco .....0046, 0047, 0057, 0081, 0123,  
 0172, 0213, 0214, 0490  
 Philips .....0027, 0044, 0045, 0046, 0047,  
 0048, 0054, 0081, 0436  
 Pilot .....0046, 0057  
 Pioneer .....0193  
 Portland .....0046, 0119  
 Prism .....0078  
 Proscan .....0057, 0074, 1374  
 Proton .....0030, 0205, 0493  
 Pulsar .....0044, 0046

**Q**

Quasar .....0078, 0082, 0192, 0277

**R**

RCA .....0045, 0046, 0074, 0078, 0117,  
 0120, 1074, 1174, 1274, 1374  
 Radio Shack .....0046, 0057, 0074, 0083, 0181,  
 0192, 0205, 0207, 0436  
 Realistic .....0046, 0057, 0083, 0181, 0192,  
 0205, 0207  
 Remotec.....0120, 0172, 0198, 0277, 0403,  
 0418, 0451  
 Rhapsody .....0212, 0243  
 Runco .....0044, 0057, 0524

**S**

SSS .....0046, 0207  
 Sampo .....0057  
 Samsung .....0046, 0057, 0083, 0087, 0117,  
 0205, 0454

Sansei .....0478  
 Sansui .....0490  
 Sanyo .....0181, 0186, 0235, 0403, 0451  
 Scimitus .....0046  
 Scotch .....0205  
 Scott .....0046, 0205, 0206, 0207, 0263  
 Sears .....0074, 0081, 0083, 0181, 0183,  
 0186, 0198, 0205, 0206  
 Semivox .....0207  
 Semp .....0183  
 Sharp .....0120, 0192, 0283, 0616  
 Shogun .....0046  
 Signature .....0043  
 Simpson .....0213, 0214  
 Sony .....0027, 0080, 0107, 0120, 0172,  
 0177, 0183, 0188, 0197, 0277,  
 0403, 0451  
 Soundesign .....0205, 0206, 0207, 0213  
 Spectricon .....0030  
 Squareview .....0198  
 Starlite.....0207  
 SuperTech .....0243  
 Supre-Macy .....0073  
 Supreme.....0027  
 Sylvania .....0047, 0057, 0081, 0123, 0213,  
 0214  
 Symphonic .....0198

**T**

TMK .....0083, 0204, 0205  
 Tandy .....0120  
 Tatung .....0030, 0082  
 Technics .....0044, 0074, 0078, 0277, 1374  
 Technol Ace .....0206  
 Techwood .....0030, 0078, 0083  
 Teknika .....0043, 0046, 0081, 0083, 0087,  
 0119, 0177, 0206, 0207, 0213  
 Telefunken .....0083, 0279  
 Thomson .....0587  
 Toshiba .....0063, 0087, 0181, 0183, 0268,  
 0529  
 Tosonic .....0212

**U**

Ultra .....0418  
 Universal.....0048, 0054

**V**

Vector Research .....0057  
 Victor .....0027, 0063, 0080, 0120, 0172,  
 0177, 0183, 0187, 0188, 0193,  
 0197, 0213, 0277, 0283, 0291,  
 0369, 0403, 0451  
 Vidikron .....0081  
 Vidtech .....0046, 0063, 0205  
 Viking .....0073

**W**

Wards .....0043, 0046, 0047, 0048, 0054,  
 0057, 0081, 0083, 0107, 0123,  
 0183, 0192, 0205, 0206, 0214  
 White Westinghouse .....0651, 0650

**Y**

Yamaha .....0046, 0057

**Z**

Zenith .....0043, 0044, 0119  
 Zonda .....0030

VCRのセットアップコード  
**SETUP CODES FOR VCR**  
**SETUP CODES FÜR VIDEOGERÄTE**  
**CODES DE REGLAGE POUR MAGNETOSCOPE**  
**REGOLAZIONE CODICI PER VIDEOREGISTRATORE (VCR)**  
**AJUSTAR CÓDIGOS PARA VCR**  
**INSTELCODES VOOR VIDEORECORDER**  
**INSTÄLLNINGSKODER FÖR VIDEOBANDSPELARE**  
 録像機設置代碼  
 录像机设置代碼

<b>A</b>	
Admiral	0075
Adventura	0027
Aiko	0305
Aiwa	0027, 0064, 0334
Akai	0068, 0088, 0133, 0308, 0315
American High	0062
Anam	0064, 0189, 0253, 0267, 0305
Anam National	0189, 0253, 1189
Asha	0267
Audio-Technica	0027, 0059, 0060, 0065, 0069, 0070, 0072, 0073, 0075, 0079, 0085, 0088, 0094, 0099, 0223, 0253, 0411
Audiovox	0064
<b>B</b>	
Beaumarck	0267
Bell & Howell	0131
Blaupunkt	0253
Broksonic	0029, 0148, 0211, 0236
<b>C</b>	
CCE	0099, 0305
Calix	0064
Canon	0062
Capehart	0047
Carver	0108
Cineral	0305
Citizen	0064, 0305
Colt	0099
Craig	0064, 0074, 0099, 0267, 0298
Curtis Mathes	0062, 0068, 0087, 0189
Cybernex	0267
<b>D</b>	
Daewoo	0047, 0072, 0073, 0305, 0395, 0588
Daytron	0047
Denon	0069
Dynatech	0027
<b>E</b>	
Electrohome	0064
Electrophonic	0064
Emerex	0059
Emerson	0027, 0029, 0064, 0070, 0088, 0148, 0211, 0236, 0305, 0588
<b>F</b>	
Fisher	0074, 0131
Fuji	0060, 0062
Funai	0027
<b>G</b>	
GE	0062, 0075, 0087, 0229, 0267
Garrard	0027
General	0079
Go Video	0553

GoldStar	0064, 0065, 0252, 0498
Gradiente	0027
Grundig	0222
<b>H</b>	
Hi-Q	0074
Harley Davidson	0027
Harman/Kardon	0065, 0108
Harwood	0099
Headquarter	0073
Hitachi	0027, 0068, 0069, 0132, 0193, 0262
<b>J</b>	
JVC	0068, 0094, 0411
Jensen	0068
<b>K</b>	
KEC	0064, 0305
KLH	0099
Kenwood	0065, 0068, 0073, 0094, 0411
Kodak	0062, 0064
<b>L</b>	
LXI	0064
Lloyd's	0027
Logik	0099
<b>M</b>	
MEI	0062
MGA	0070, 0088, 0267
MGN Technology	0267
MTC	0027, 0267
Magnasonic	0305
Magnavox	0027, 0062, 0066, 0108
Magnin	0267
Marantz	0062, 0065, 0108
Marta	0064
Matsushita	0062, 0189, 0254
Memorex	0027, 0062, 0064, 0066, 0073, 0074, 0075, 0131, 0267, 0334, 1189, 1289
Minolta	0069, 0132
Mitsubishi	0070, 0075, 0094, 0088, 0200, 0223
Motorola	0062, 0075
Multitech	0027, 0099
<b>N</b>	
NAD	0085
NAP	0060, 0062, 0064, 0066, 0069, 0132
NEC	0065, 0067, 0068, 0094, 0131, 0397
National	0253
Nikko	0064
Noblex	0267
<b>O</b>	
Olympus	0062, 0253
Optimus	0064, 0075, 0085, 0131, 0189, 1089, 1189, 1289
Optonica	0089
Orion	0029, 0211
<b>P</b>	
Panasonic	0062, 0189, 0252, 0253, 0254, 0394, 1189
Penney	0062, 0064, 0065, 0067, 0069, 0267
Pentax	0069, 0132
Philco	0062, 0236

Philips	0062, 0089, 0108
Pilot	0064
Pioneer	0085, 0094
Portland	0047
Profitrone	0267
Proscan	0087, 0229
Protec	0099
Pulsar	0066
<b>Q</b>	
Quarter	0073
Quartz	0073
Quasar	0062, 0189, 1189
<b>R</b>	
RCA	0062, 0069, 0075, 0087, 0132, 0133, 0229, 0267
Radio Shack	0027
Radix	0064
Randex	0064
Realistic	0027, 0062, 0064, 0073, 0074, 0075, 0089, 0131
Runco	0066
<b>S</b>	
STS	0069
Samsung	0072, 0267, 0453
Sanky	0066, 0075
Sansui	0027, 0068, 0094, 0298
Sanyo	0073, 0074, 0131, 0267, 0395, 0396
Scott	0070, 0072, 0148, 0211
Sears	0027, 0062, 0064, 0069, 0073, 0074, 0131, 0132
Semp	0072
Sharp	0075, 0089, 0390
Shintom	0099
Shogun	0267
Signature	0062
Singer	0099
Sony	0027, 0059, 0060, 0062, 0065, 0069, 0070, 0072, 0073, 0075, 0094, 0253
Sylvania	0027, 0062, 0070, 0108
Symphonic	0027
<b>T</b>	
TMK	0267
Tatung	0068
Teac	0027, 0068
Technics	0062, 0066, 0087, 0189, 0229, 0254
Teknika	0027, 0062, 0064, 0079
Telefunken	0214
Thomas	0027
Thomson	0347
Toshiba	0072, 0070, 0393
Television	0064, 0267
<b>U</b>	
Unitech	0267
<b>V</b>	
Vector	0072
Vector Research	0065, 0067
Victor	0027, 0059, 0060, 0065, 0068, 0069, 0070, 0072, 0073, 0075, 0079, 0085, 0088, 0094, 0131, 0189, 0193, 0200, 0223, 0253, 0254, 0390, 0393, 0394, 0395, 0396, 0397, 0411

Video Concepts	0067, 0072, 0088
Videosonic	0267
<b>W</b>	
Wards	0027, 0062, 0069, 0072, 0074, 0075, 0087, 0089, 0099, 0108, 0267
White Westinghouse	0305
<b>X</b>	
XR-1000	0027, 0062, 0099
<b>Y</b>	
Yamaha	0065, 0068
<b>Z</b>	
Zenith	0027, 0060, 0066

DVDのセットアップコード  
**SETUP CODES FOR DVD**  
**SETUP CODES FÜR DVD**  
**CODES DE REGLAGE POUR DVD**  
**REGOLAZIONE CODICI PER DVD**  
**AJUSTAR CÓDIGOS PARA DVD**  
**INSTELCODES VOOR DVD**  
**INSTÄLLNINGSKODER FÖR DVD**  
 數碼視頻影碟播放機設置代碼  
 数码视频影碟播放机设置代碼

<b>D</b>	
Denon	0517
<b>H</b>	
Harman/Kardon	0609
<b>J</b>	
JVC	0585
<b>K</b>	
Kenwood	0561
<b>M</b>	
Magnavox	0530
Mitsubishi	0548
<b>O</b>	
Onkyo	0530
Optimus	0552
<b>P</b>	
Panasonic	0517
Philips	0530, 0566
Pioneer	0552, 0598
Proscan	0549
<b>R</b>	
RCA	0549
<b>S</b>	
Samsung	0600
Sony	0560
<b>T</b>	
Technics	0517
Theta Digital	0598
Toshiba	0530
<b>Y</b>	
Yamaha	0517, 0572
<b>Z</b>	
Zenith	0530, 0618