

DENON

プリセットコード一覧表 / List of Preset Codes / Liste von voreingestellten Codes / Liste des codes pré-réglés / Lista dei codici pre-regolati / Lista de Códigos Pre-ajustados / Lijst van vooringestelde codes / Förteckning över förinställda koder / 預選代碼一覽表 / 预选代码一覽表

CDプレーヤーのセットアップコード
SETUP CODES FOR CD PLAYERS
SETUP-CODES FÜR CD-PLAYER
CODES DE REGLAGE POUR LECTEURS CD
REGOLAZIONE CODICI PER LETTORE CD
AJUSTAR CÓDIGOS PARA LOS REPRODUCTORES DE CD
INSTELCODES VOOR CD-SPELERS
INSTÄLLNINGSKODER FÖR CD-SPELARE
鐳射唱盤播放機設置代碼
鐳射唱盤播放机设置代码

Dual0034, 0035
Dynamic Bass0029
E	
EEC0034
Eclipse0059
Elektra0046, 0051
Emerson0021, 0024, 0044, 0054
F	
Fisher0014, 0027, 0029, 0045
G	
GE0002
Garrard0039, 0041, 0046, 0048, 0049
Gemini0059
Genexxa0007, 0024, 0044, 0050
GoldStar0047
Goodmans0039, 0041, 0044, 0058, 0059
Grundig0023
H	
HCM0059
Harman/Kardon0023, 0026, 0050
Hiro0059
Hitachi0007, 0021
I	
IR0001
Inkel0030, 0035, 0051
J	
JVC0012, 0061, 0064
K	
Kenwood0005, 0008, 0009, 0033
Kodak0042
Krell0023
Kyocera0004
L	
LXI0044
Linn0023
Luxman0015
M	
MCS0006, 0010
MTC0048, 0059
Magnavox0023, 0044
Marantz0006, 0023, 0030
Matsui0023
McIntosh0042
Memorex0021, 0024, 0028, 0030, 0044
Meridian0023
Micromega0023
Miro0001
Mission0023
Mitsubishi0022
Myryad0023

A	
ADC0004
Acoustic Research0048
Adcom0021, 0038
Aiwa0003, 0018, 0023
Akai0022
Alba0058
Alto0059
Arcam0023
Ariston0059
Audio Alchemy0034
Audio Pro0051
Audio Research0023
Audio-Technica0025
AudioTon0023
Audiolab0023
Audiomeca0023
B	
BSR0034, 0039
Bestar0024
Burmester0048
Bush0039, 0058
C	
CDC0048
CEC0027
Cairn0023
California Audio Labs0006, 0043
Cambridge0059
Carrera0034
Carver0023, 0029, 0051
Condor0024
Craig0058
Crown0017
Cyrus0023
D	
DAK0039
DBX0040
DKK0001
DMX Electronics0023
Denon0000

N	
NAD0001
NEC0010, 0038
NSM0023
Nagaoka0004
Naim0023
Nakamichi0020
Nikko0024, 0025, 0027, 0059
O	
Onkyo0016
Optimus0001, 0007, 0009, 0013, 0019, 0028, 0029, 0034, 0035, 0041, 0044, 0045, 0048, 0050, 0051, 0053
P	
PMG0024
Panasonic0006, 0043, 0065
Parasound0034, 0048
Philips0023, 0042
Pink Triangle0059
Pioneer0007, 0044, 0053
Polk Audio0023
Poppy0024
Proton0023
Q	
QED0023
Quad0023
Quasar0006
R	
RCA0002, 0007, 0011, 0021, 0029, 0044, 0053, 0066
Radiotone0058, 0059
Realistic0021, 0024, 0028, 0029, 0030, 0048
Revox0023
Roadstar0052
Rotel0023, 0048
Royal0048
S	
SAE0023
STS0004
Sansui0023, 0036, 0044, 0059
Sanyo0013, 0029, 0045
Schneider0058
Scott0021, 0024, 0044
Sears0044
Sharp0009, 0030
Sherwood0030, 0035, 0050
Shure0010
Sonic Frontiers0023
Sony0001, 0056, 0057
Soundesign0019, 0049
SuperTech0059
Synergy0059
T	
Tandy0007
Tascam0048
Teac0027, 0030, 0046, 0048, 0058, 0059
Technics0006, 0037, 0043
Thomson0011
Thorens0023
U	
Universum0011, 0023, 0051
V	
Vector Research0034, 0047
Victor0012

W	
Wards0011, 0023
Watson0058
Y	
Yamaha0008, 0025, 0032
Yorx0052
Z	
Zenith0058

ミニディスクのセットアップコード
SETUP CODES FOR MINIDISC (MD)
SETUP-CODES FÜR MINIDISCS (MD)
CODES DE REGLAGE POUR MINIDISC(MD)
REGOLAZIONE CODICI PER MINIDISCO (MD)
AJUSTAR CÓDIGOS PARA MINIDISCOS(MD)
INSTELCODES VOOR MINIDISC(MD)
INSTÄLLNINGSKODER FÖR MD-SPELARE
迷你磁碟播放機設置代碼
迷你磁碟播放机设置代码

B	
BSR1000
C	
Condor1000
D	
Denon1111
Denver1003
J	
JVC1015
K	
Kenwood1004, 1005, 1012
L	
Luxman1009
O	
Onkyo1007
Optimus1013
Orion1011
P	
Pioneer1013, 1017
S	
Schneider1000
Sharp1006
Sherwood1014
Sony1001, 1002
T	
Technics1016
U	
Universum1018
Y	
Yamaha1008

DBSのセットアップコード

SETUP CODES FOR DIGITAL BROADCAST SATELLITE

SETUP CODES FÜR DIGITALEN SENDESATELLITEN-TUNER

CODES DE REGLAGE POUR TUNER D'ÉMISSION PAR SATELLITE

REGOLAZIONE CODICI PER SINTONIZZATORE VIA SATELLITE PER TRASMISSIONI DIGITALI

AJUSTAR CÓDIGOS PARA SINTONIZADOR DE EMISIONES DIGITALES POR SATÉLITE

INSTELCODES VOOR DIGITALE SATELLIETONTVANGER

INSTÄLLNINGSKODER FÖR SATELLITMOTTAGARE

衛星設置代碼

卫星设置代码

A		Eurocrypt3516
ABSat3549	Eurosat3510
AGS3528, 3531	Eurosky3510, 3521
ASLF3533	Eurostar3529, 3564, 3565
Akai3507	Expressvu3543
Akena3528	F	
Alba3516	FTE3554
Allsat3507	Fenner3528
Alltech3533	Ferguson3532
Alpha3528	Finlandia3516
AlphaStar3542	Finlux3516
Amtronica3533	Foxtel3558
Amstrad3550	Fracarro3556
Anglo3533	Fuba3506
Ankaro3533	G	
Armstrong3510	GE3519
Asat3507	Galaxis3512, 3554
Astacom3528	Gardiner3546
Astra3510, 3521	General Instrument3555
Astro3506	Gold Box3551
Athena3528	Gooding3520
Axiel3528	Goodmans3516
B		Gradiente3559
BT3528, 3531	Granada3516
Bestar3510	Grundig3506, 3520, 3540, 3550
Blaupunkt3506	H	
Boca3510	HTS3543
British Sky Broadcasting3550	Helium3521
Broco3533	Hirschmann3506, 3568
Bubu Sat3533	Hitachi3516, 3547
C		Houston3528
Canal Digital3551	Hughes Network Systems3539, 3574, 3575
Canal Satellite3551	Humax3554
Canal+3551	Huth3510
Chaparral3508	I	
CityCom3501, 3546	IR3506, 3516
Colombia3528	ISkyB3559
Columbia3502	InVideo3556
Columbus3528	Indovision3559
Conдор3521	Intertronic3510
Conrad3501, 3521	Intervision3521, 3524
Crown3510	J	
Cyrus3507	JOK3531
D		JVC3520, 3543
D-box3536	K	
DNT3507	K-SAT3533
Daewoo3533	Kathrein3506, 3507, 3523, 3527
Discovery3531, 3528	Kreiselmeyer3506
Dynasat3529	L	
E		La Sat3521
EP Sat3516	Lenco3533
Echostar3505, 3513, 3518, 3533, 3543, 3551, 3556, 3560, 3569	Lifesat3533
Einhell3510, 3533	Loewe3510
Elta3507	Lorenzen3521, 3538
Emme Esse3529, 3556	M	
Engel3533	Magnavox3535, 3537

Manata3531	Sagem3548, 3572
Manhattan3516	Samsung3571
Marantz3507	Sat Team3533
Maspro3540	Satec3533
Matsui3520	Satline3524
Max3521	Schneider3528
MediaSat3551	Seemann3510
Mediamarkt3510	Seleco3556
Medion3533	Siemens3506
Mega3507	Skantin3533
Memorex3537	Sky Television3561
Metronic3510	Skymaster3524, 3533
Metz3506	Skymax3507
Micro3533	Smart3502
Micro Elektronik3533	Sony3525, 3550
Microtec3533	Star3559
Minerva3520	Star Choice3555
Mitsubishi3539	Strong3502, 3558
Morgan's3502, 3510	Sumida3510
Multichoice3526, 3558	Sunsat3533
Myryad3507	Sunstar3510
Mysat3533	Super Sat3529
N		T	
Netsat3559	TPS3548
Neuhaus3533	Tantec3516
Neusat3533	Tatung3516
Next Level3555	Technisat3570
Nikko3533	Technowelt3521
Nokia3516, 3536, 3541, 3557, 3563, 3573	Teco3510
Nordmende3516	Teleka3510
O		Telestar3500
Okano3510, 3528	Televés3516
Orbit3562	Televisa3559
Oxford3528	Thomson3516, 3532, 3551, 3566
P		Thorn3516
Pace3509, 3516, 3517, 3534, 3545, 3550, 3559	Tonna3528
Palladium3520	Toshiba3539, 3544
Panasat3522, 3558	Triax3501
Panasonic3511, 3530, 3550	U	
Panda3516	Uniden3535, 3537
Patriot3528	Unisat3507, 3510
Philips3503, 3507, 3516, 3520, 3531, 3535, 3537, 3539, 3540, 3551, 3567, 3574	Universum3506, 3520
Pioneer3514, 3551	V	
Prima3545	VTech3546
Profile3531	Variosat3506
Promax3516	Ventana3507
Prosat3524	Vestel3538
Proscan3515	W	
Pye3520	Wela3533
Q		Wewa3516
Quadral3524	Wisi3506, 3516
Quelle3521	World Sat3531
R		X	
RCA3504, 3515, 3519, 3552	XSat3528
RFT3507	Xcom Multimedia3528
Radio Shack3555	Z	
Radiola3507	Zehnder3500, 3546
Roadstar3533	Zenith3553
Rover3524, 3533	Zeta Technology3507
S		Zwergnase3510
SEG3538		
SKR3533		
SKY3553, 3559		
SM Electronic3533		
Saba3531		
Sabre3516		

VCRのセットアップコード

SETUP CODES FOR VCR

SETUP-CODES FÜR VIDEOGERÄTE

CODES DE REGLAGE POUR MAGNETOSCOPE

REGOLAZIONE CODICI PER VIDEOREGISTRATORE (VCR)

AJUSTAR CÓDIGOS PARA VCR

INSTEELCODES VOOR VIDEORECORDER

INSTÄLLNINGSKODER FÖR VIDEOBANDSPELARE

録像機設置代碼

录像机设置代码

Cybernex3029
Cyrus3018
D	
Daewoo3012, 3030, 3043
Dansai3017
De Graaf3010
Decca3000, 3018
Denon3010
Diamant3006
Domland3026
Dual3009
Dumont3000, 3018, 3019
Dynatech3000
E	
ESC3029, 3030
Elbe3007
Elcotech3017
Electrohome3006
Electroponic3006
Elin3029
Elsay3017
Elta3017, 3030
Emerex3003
Emerson3000, 3001, 3006, 3011, 3021, 3024, 3026, 3030, 3037
F	
Ferguson3009, 3032
Fidelity3000
Finlandia3018, 3019
Finlux3000, 3010, 3018, 3019
Firstline3006, 3011, 3012, 3017, 3026
Fisher3013, 3019
Flint3026
Fuji3004, 3005
Fujitsu3000
Funai3000
G	
GE3005, 3014, 3015, 3029, 3044
GEC3018
Galaxis3030
Garrard3000
General Technic3033
Genexxa3019
Go Video3035
GoldHand3017
GoldStar3006, 3007, 3027
Goodmans3000, 3006, 3017, 3030
Gradiente3000
Graetz3009, 3019, 3029
Granada3018, 3019
Grandin3000, 3006, 3017
Grundig3017, 3018, 3025, 3028
H	
HCM3017
HI-Q3013
Hanimex3034
Hanseatic3006
Harley Davidson3000
Harman/Kardon3007, 3018
Harwood3017
Hinari3002, 3017, 3029, 3034
Hisawa3034
Hischito3012
Hitachi3000, 3002, 3009, 3010, 3029
Hornophone3018
Hughes Network Systems3010
Hypson3017

I	
IR3002, 3009, 3010, 3012, 3013, 3017, 3018, 3019, 3020, 3026, 3028, 3029, 3033
ITT3009, 3019, 3020, 3029
ITV3006, 3030
Imperial3000
Ingersol3002
Inno Hit3017, 3029
Interfunk3018
Intervision3000, 3006, 3026, 3030
Irradio3017, 3018
J	
JVC3009, 3016
Jensen3009
K	
KEC3006, 3030
KLH3017
Kaisui3017
Kendo3020, 3026
Kenwood3007, 3009, 3016
Kimari3013
Kneissel3034
Kodak3005, 3006
Korpel3017
Kuba Electronic3013
Kyoto3017
L	
LXI3006
Lenco3030
Leyco3017
Lloyd's3000
Loewe3002, 3006, 3018, 3023, 3036, 3050
Logik3002, 3017, 3029
Luxor3011, 3014, 3019, 3020
M	
M Electronic3000, 3007
MEI3005
MGA3011, 3029
MGN Technology3029
MTC3000, 3029
Magnasonic3030
Magnavox3000, 3005, 3008, 3018, 3022, 3038
Magnin3029
Manesth3012, 3017
Marantz3005, 3018
Marta3006
Matsui3002, 3026, 3033, 3034
Matsushita3005, 3023, 3036
Medion3033
Memorex3000, 3005, 3006, 3008, 3013, 3014, 3019, 3023, 3026, 3029, 3033, 3036, 3037, 3046, 3050, 3052
Memphis3017
Metz3006, 3023, 3025, 3036, 3050
Minerva3025
Minolta3010
Mitsubishi3011, 3014, 3016, 3018
Motorola3005, 3014
Multitech3000, 3017
Murphy3000
Myryad3018
N	
NAD3019
NAP3008
NEC3007, 3009, 3016, 3019
National3028

Neckermann3018
Nesco3017
Nikkai3017, 3030
Nikko3006
Noblex3029
Nokia3009, 3019, 3020, 3029
Nordmende3009, 3032
O	
Oceanic3000, 3009
Okano3031, 3033
Olympus3005, 3028
Optimus3006, 3014, 3019, 3023, 3035, 3036, 3047, 3048, 3050, 3052
Orion3001, 3002, 3021, 3024, 3026, 3033, 3034, 3037
Osaki3000, 3006, 3017
Otake3026
Otto Versand3018
P	
Palladium3006, 3009, 3017
Panasonic3005, 3023, 3027, 3028, 3036, 3040, 3048, 3050, 3052, 3053
Pathe Cinema3002, 3011
Pathe Marconi3009
Penney3005, 3006, 3007, 3010, 3029
Pentax3010
Perdio3000
Philco3005, 3007, 3026, 3037
Philips3005, 3018, 3038, 3041, 3049, 3051
Phonola3018
Pilot3006
Pioneer3016, 3018
Polk Audio3018
Portland3030
Pro Vision3030
Profitronic3029
Proline3000
Proscan3015, 3044
Prosonic3030
Protec3017
Pulsar3008
Pye3018
Q	
Quasar3005, 3023, 3036, 3050
Quelle3018
R	
RCA3005, 3010, 3014, 3015, 3020, 3022, 3029, 3044
RFT3017
Radialva3006, 3014
Radio Shack3000, 3046
Radiola3018
Radix3006
Randex3006
Realistic3000, 3005, 3006, 3013, 3014, 3019
ReplayTV3039, 3040
Rex3009
Roadstar3006, 3017, 3029, 3030
Runco3008
S	
SBR3018
SEG3029
SEI3002, 3018
STS3010
Saba3009, 3032
Saisho3002, 3026
Salora3011, 3020
Samsung3012, 3029, 3035

Sanky3008, 3014
 Sansui3000, 3009, 3016, 3026, 3037
 Sanwa3002
 Sanyo3013, 3019, 3029
 Saville3034
 Schaub Lorenz3000, 3009, 3019
 Schneider3000, 3017, 3018
 Scott3011, 3012, 3021, 3024
 Sears3000, 3005, 3006, 3010, 3013, 3019
 Seleco3009
 Semp3012
 Sentra3017
 Sharp3014
 Shintom3017, 3019
 Shivaki3006
 Shogun3029
 Shorai3002
 Siemens3006, 3018, 3019, 3025
 Siera3018
 Silva3006
 Singer3012, 3017
 Sinudyne3002, 3018
 Sonneclair3017
 Sontec3006
 Sony3000, 3003, 3004, 3005, 3042, 3045
 Soundwave3006, 3026
 Ssangyong3017
 Stern3030
 Sunkai3033
 Sunstar3000
 Suntronic3000
 Sunwood3017
 Supra3006
 Sylvania3000, 3005, 3011, 3018
 Symphonic3000

T
 TMK3029
 Taisho3002, 3026
 Tandberg3030
 Tandy3000, 3019
 Tashiko3000
 Tatung3000, 3009, 3018
 Teac3000, 3009, 3030, 3043
 Tec3017, 3030
 Tech Line3017
 Technics3005, 3023, 3028
 Teknika3000, 3005, 3006
 Teleavia3009
 Telefunken3009, 3032
 Teletch3017
 Tenosal3017
 Tensai3000
 Thomas3000
 Thomson3009, 3015, 3016, 3032
 Thorn3009, 3019
 Tivo3041, 3042
 Tokai3017
 Toshiba3009, 3011, 3012, 3018
 Totevision3006, 3029

U
 Uher3029
 Ultravox3030
 Unitech3029
 Universum3000, 3006, 3018, 3020, 3025, 3029

V
 Vector3012
 Vector Research3007
 Victor3009, 3016
 Video Concepts3012
 Videosonic3029

W
 Wards3000, 3005, 3010, 3013, 3014, 3015, 3017, 3018, 3022, 3029, 3044
 Watson3018
 White Westinghouse3017, 3026, 3030

X
 XR-10003000, 3005, 3017

Y
 Yamaha3007
 Yamishi3017
 Yokan3017
 Yoko3029

Z
 Zenith3000, 3004, 3008, 3026, 3037

CDRのセットアップコード
SETUP CODES FOR CDR
SETUP-CODES FÜR CDR
CODES DE REGLAGE POUR CDR
REGOLAZIONE CODICI PER CDR
AJUSTAR CÓDIGOS PARA CDR
INSTEPCODES VOOR CDR
INSTÄLLNINGSKODER FÖR CDR

D
 Denon0000, 0001

H
 HHB0500

K
 Kenwood0501

M
 Marantz0501

N
 NAD0503

P
 Philips0501
 Pioneer0500, 0502

R
 RCA0502

ケーブルのセットアップコード
SETUP CODES FOR CABLE
SETUP-CODES FÜR KABEL
CODES DE REGLAGE POUR CABLE
REGOLAZIONE CODICI PER CAVI
AJUSTAR CÓDIGOS PARA CABLE
INSTEPCODES VOOR KABEL
INSTÄLLNINGSKODER FÖR KABEL-TV-MOTTAGARE
 纜設置代碼
 纜設置代碼

A
 ABC4001, 4002, 4005, 4006
 Alcatel4028, 4029
 Americast4030

B
 Bell & Howell4005
 Bell South4030
 Birmingham Cable Communications4012
 British Telecom4001

C
 Cable & Wireless4034
 Cabletime4018, 4024

D
 Daeryung4002

F
 Filmnet4017
 France Telecom4019, 4028, 4029

G
 Galaxi4002
 General Instrument4020, 4025
 GoldStar4008

H
 Hamlin4003, 4011

J
 Jerrold4001, 4004, 4005, 4012, 4020, 4025

M
 MNet4017
 Macab4026
 Memorex4000
 Motorola4020, 4035
 Mr. Zap4036

N
 Noos4026

O
 Ono4034

P
 PVP Stereo Visual Matrix4001
 Pace4009, 4032, 4034
 Panasonic4000, 4007
 Paragon4000
 Philips4015, 4016
 Pioneer4008, 4023, 4027, 4037
 Pulsar4000

Q
 Quasar4000

R
 Regal4011, 4014
 Runco4000

S
 Sagem4026
 Samsung4008

Scientific Atlanta4002, 4006, 4013, 4021, 4027, 4037

Sony4031
 Starcom4001
 Supercable4012

T
 Tele+14017
 Tocom4004
 Toshiba4000

U
 United Cable4001

V
 Videoway4010
 Visionetics4033
 Visiopass4019

Z
 Zenith4000, 4022, 4030

テレビのセットアップコード
SETUP CODES FOR TELEVISION
SETUP-CODES FÜR FERNSEHGERÄTE
CODES DE REGLAGE POUR TELEVISION
REGOLAZIONE CODICI PER TELEVISIONE
AJUSTAR CÓDIGOS PARA TELEVISIÓN
INSTALCODES VOOR TELEVISIE
INSTÄLLNINGSKODER FÖR TV-APPARATER
 電視機設置代碼
 电视机設置代碼

A

A-Mark	4501
A.R. Systems	4593
AOC	4501, 4508, 4512, 4519, 4554
AWA	4502
Acura	4502
Admiral	4531, 4545, 4585
Adventura	4516
Adyson	4564
Aiko	4530
Aiwa	4612
Akai	4502, 4512, 4562, 4565, 4596
Akib	4572
Akiba	4514, 4565, 4571, 4572, 4584
Akura	4565, 4569
Alaron	4552, 4563
Alba	4502, 4513, 4514, 4565, 4579, 4607
Allorgan	4572
Allstar	4514
Ambassador	4550
America Action	4553
Amplivision	4564
Ampro	4619
Amstrad	4502, 4514, 4549, 4550, 4579, 4581
Anam	4501, 4502, 4553, 4568
Anam National	4522, 4568, 4605
Anglo	4569
Anitech	4502
Ansonic	4502, 4514, 4578
Arcam	4563, 4564
Archer	4501
Aristona	4514, 4593
Asora	4502
Asuka	4565
Atlantic	4561
AudioTon	4564, 4569
Audiosonic	4514, 4536
Audiovox	4501, 4530, 4553, 4583, 4599
Autovox	4561

B

BPL	4571
BSR	4572
BTC	4565
Baird	4526, 4527, 4557, 4558, 4562, 4564
Basic Line	4502, 4565
Baur	4514, 4590, 4592
Baysonic	4553
Bazin	4564
Beaumarck	4551
Beko	4578, 4615
Belcor	4508
Bell & Howell	4505, 4542
Beon	4514
Best	4578
Bestar	4514, 4578, 4580

Binatone	4564
Blaupunkt	4560, 4573, 4574
Blue Sky	4565, 4607
Blue Star	4571
Boots	4564
Bradford	4553
Brandt	4536, 4575
Brinkmann	4512, 4582
Britannia	4563
Brockwood	4508
Broksonic	4501, 4567, 4585
Bush	4502, 4513, 4514, 4565, 4571, 4572, 4576, 4579, 4580, 4607

C

CCE	4514, 4564
CGE	4578, 4582
CS Electronics	4563
CXC	4553
Candle	4512, 4516, 4523, 4555
Canton	4565
Carad	4598
Carena	4514, 4584
Carnivale	4512
Carrefour	4513
Carver	4521, 4548
Cascade	4502
Cathay	4514
Celebrity	4500
Centurion	4514
Cimline	4502
Cineral	4530, 4583
Citizen	4512, 4515, 4516, 4523, 4524, 4530, 4555, 4570
City	4502
Clairtone	4554
Clarivox	4514
Clatronic	4578
Concerto	4523
Condor	4578
Contec	4502, 4513, 4553, 4554, 4563
Continental Edison	4536, 4588
Cosmel	4514
Craig	4553
Crosley	4521
Crown	4502, 4514, 4515, 4553, 4578, 4582
Curtis Mathes	4505, 4512, 4515, 4517, 4518, 4521, 4523, 4524, 4531, 4539, 4542, 4547, 4583, 4586, 4618, 4622, 4626
Cybertron	4565

D

DER	4557, 4558
Daewoo	4502, 4508, 4514, 4515, 4530, 4542, 4580, 4583, 4599, 4600
Dainichi	4565
Dansai	4514
Dayton	4502
Daytron	4508
De Graaf	4562
Decca	4514, 4526
Denko	4569
Denon	4539
Denver	4514
Desmet	4502, 4514
Diamant	4514
Dixi	4502, 4514
Dual	4514, 4564
Dual Tec	4564
Dumont	4506, 4508, 4525
Dwin	4617, 4620

E

ECE	4514
Elbe	4564
Electroband	4500, 4554
Electa	4569
Elin	4514
Elite	4565
Elta	4502
Emerson	4508, 4515, 4542, 4550, 4551, 4552, 4553, 4554, 4567, 4570, 4571, 4585, 4599, 4600
Emperor	4571
Envision	4512
Erres	4504, 4514
Etron	4502
Euromann	4514, 4569
Europa	4514
Europhon	4564
Expert	4561
Exquisit	4514

F

Fenner	4502, 4580
Ferguson	4514, 4527, 4536, 4557, 4558, 4575
Fidelity	4558, 4563
Filsai	4564
Finlandia	4562
Finlux	4514, 4525, 4526, 4552
Firstline	4502, 4563, 4564, 4572, 4607
Fisher	4542, 4544, 4562, 4564, 4578
Flint	4584
Forgestone	4558
Formenti	4514
Fortress	4531
Fraba	4514, 4578
Friac	4502, 4578
Frontech	4545, 4569
Fujitsu	4526, 4552, 4561, 4609
Funai	4549, 4552, 4553, 4569, 4572
Futuretech	4553

G

GBC	4502, 4565, 4580
GE	4510, 4511, 4517, 4518, 4522, 4531, 4538, 4551, 4571, 4583, 4618, 4622, 4626
GEC	4514, 4526, 4564
GPM	4565
Galaxi	4514
Galaxis	4514, 4578
Geloso	4502
General	4555
General Technic	4502
Genexxa	4545, 4565
Gibralter	4506, 4508, 4512
GoldStar	4508, 4512, 4514, 4515, 4523, 4536, 4551, 4564
Gooding	4588
Goodmans	4513, 4514, 4526, 4552, 4564, 4579, 4580, 4600
Gorenje	4578
Gradiente	4520, 4523, 4548
Graetz	4545
Granada	4514, 4526, 4562, 4564
Grandin	4571, 4598
Grundig	4514, 4525, 4560, 4588, 4593, 4595
Grunpy	4552, 4553

H

HCM	4502, 4571, 4581
Halifax	4564
Hallmark	4551
Hampton	4563, 4564
Hanimex	4572
Hanseatic	4514, 4593
Hantarex	4514
Hantor	4514
Harley Davidson	4552
Harman/Kardon	4521
Harvard	4553
Harwood	4502, 4514, 4581
Hema	4502, 4564
Hikona	4565
Hinari	4502, 4513, 4514, 4552, 4565
Hisawa	4571, 4584
Hitachi	4505, 4513, 4523, 4536, 4539, 4541, 4545, 4564, 4594
Hornophone	4514
Huanyu	4563, 4580
Hyper	4502, 4563, 4564
Hypson	4514, 4569, 4571

I

ICE	4564, 4569, 4579
ICeS	4565
IR	4503, 4504, 4513, 4514, 4525, 4526, 4527, 4531, 4534, 4535, 4536, 4545, 4557, 4558, 4559, 4560, 4561, 4563, 4564, 4566, 4572, 4573, 4578, 4580, 4590, 4592, 4593
ITS	4579
ITT	4545
ITV	4514, 4569
Iberia	4514
Imperial	4578, 4582
Indiana	4514
Infinity	4521
Ingelen	4545
Ingersol	4502
Inno Hit	4526
Innova	4514
Inteq	4506
Interbuy	4514, 4569
Interfunk	4514, 4545, 4592
Internal	4514
Intervision	4514, 4564, 4569
Irradio	4565, 4579
Isukai	4565

J

JBL	4521
JCB	4500
JVC	4513, 4520, 4532, 4557, 4579, 4606
Janeil	4516

K

KB Aristocrat	4545
KEC	4553
KTV	4512, 4515, 4553, 4554, 4564, 4570
Kaisui	4502, 4563, 4564, 4565, 4571
Kamp	4563
Kapsch	4545, 4561
Karcher	4598
Kasui	4571
Kathrein	4593
Kawasho	4563
Kaypani	4519
Kendo	4514

Kennedy4561
 Kenwood4508, 4512
 Kingsley4563
 Kloss4516
 Kneissel4514, 4580, 4598
 Kolster4514
 Konka4602, 4603, 4604, 4613, 4614
 Korpel4514
 Kosmos4514
 Koyoda4502
 Kyoshu4581
 Kyoto4545

L
 LG4523
 LXI4517, 4521, 4542, 4543, 4551, 4618
 Leyco4514, 4526, 4569, 4572
 Liesen & Tter4514
 Liesenkotter4514, 4573
 Lifetec4514, 4565, 4580
 Loewe4592
 Logik4505
 Luma4561
 Lumatron4564
 Luxman4523
 Luxor4559

M
 M Electronic4502, 4514, 4536, 4545, 4564, 4580, 4587
 MEI4554
 MGA4508, 4512, 4540, 4551
 MTC4508, 4512, 4523, 4524, 4554, 4563, 4592
 Magnafon4527, 4563
 Magnavox4509, 4512, 4513, 4521, 4533, 4552, 4555, 4556, 4624
 Magnum4514
 Majestic4505
 Manesth4564, 4569
 Marantz4512, 4514, 4521, 4593
 Mark4514
 Matsui4502, 4503, 4513, 4514, 4526, 4550, 4562, 4564, 4572, 4576, 4579, 4588
 Matsushita4568, 4605
 Mediator4504, 4514
 Medion4607
 Megas4598
 Megatron4501, 4539, 4551
 Memorex4502, 4505, 4523, 4540, 4542, 4551, 4552, 4568, 4585
 Metz4577
 Midland4506, 4515, 4517, 4518, 4538, 4618
 Minerva4525, 4588
 Minoka4581
 Minutz4510
 Mitsubishi4508, 4513, 4531, 4535, 4540, 4551, 4592
 Mivar4563
 Monaco4502
 Motorola4522, 4531
 Multibroadcast4558
 Multitech4502, 4553, 4563, 4564
 Murphy4515, 4526, 4545, 4563
 Myryad4593

N
 NAD4543, 4547, 4551
 NEC4508, 4512, 4513, 4523, 4548, 4584, 4589
 NEI4514
 NTC4530
 Nakimura4514, 4580
 Nakio4587
 National4566
 Neckermann4514, 4590, 4593
 Nesco4552
 Netsat4514
 Neufunk4514, 4593
 New Tech4564
 Nicamagic4563
 Nikkai4514, 4526, 4563, 4565, 4569
 Nikko4512, 4530, 4551
 Nobliko4525, 4563
 Nokia4587
 Nordmende4536
 Noshi4507
 Novak4504
 Novatronic4514

O
 Oceanic4545
 Okano4502, 4514, 4569, 4578
 Omega4569
 Onwa4553
 Optimus4542, 4547, 4568, 4605
 Optonica4531, 4546
 Orion4514, 4550, 4552, 4567, 4572, 4576, 4585
 Orline4514, 4565
 Osaki4526, 4564, 4565, 4569, 4581
 Osio4514
 Oso4565
 Osume4526
 Otto Versand4513, 4514, 4564, 4590, 4592, 4593

P
 Pael4563
 Palladium4578, 4582
 Panama4564, 4569
 Panasonic4518, 4522, 4537, 4545, 4566, 4568, 4577, 4605
 Panavision4514
 Pathe Cinema4563
 Pausa4502
 Penney4501, 4507, 4508, 4510, 4511, 4512, 4515, 4517, 4518, 4523, 4524, 4538, 4543, 4551, 4618, 4626
 Perdio4514, 4545
 Philco4508, 4509, 4512, 4521, 4533, 4539, 4585
 Philips4504, 4514, 4521, 4558, 4580, 4593
 Phoenix4563
 Phonola4504, 4514
 Pilot4508, 4512, 4515
 Pioneer4536, 4545, 4547, 4608
 Plantron4502
 Playsonic4564
 Portland4508, 4515, 4530
 Precision4564
 Prima4569
 Princeton4616
 Prinz4559
 Prism4518
 Profex4502

Profi4502
 Profitronic4514
 Proline4526
 Proscan4517, 4618
 Prosonic4514
 Protech4502, 4514, 4564, 4569, 4582, 4607
 Proton4501, 4519, 4551, 4586
 Pulsar4506, 4508
 Pye4504

Q
 Quasar4518, 4522, 4546, 4568, 4605
 Quelle4503, 4514, 4525, 4573, 4574, 4590, 4592
 Questa4513

R
 R-Line4514
 RBM4525
 RCA4507, 4508, 4517, 4518, 4529, 4531, 4538, 4608, 4618, 4621, 4622, 4623, 4626, 4627
 RFT4526
 Radialva4514, 4565
 Radio Shack4508, 4512, 4515, 4517, 4523, 4542, 4546, 4551, 4553, 4618
 Radiola4504, 4514
 Radiomarelli4514
 Radiotone4502, 4514, 4569
 Rank Arena4513
 Realistic4508, 4512, 4515, 4523, 4542, 4546, 4551, 4553
 Recor4514
 Redstar4514
 Reflex4514
 Revox4514
 Rex4545, 4561, 4569
 Rhapsody4554, 4563
 Roadstar4502, 4565, 4569, 4582
 Royal Lux4581
 Runco4506, 4512, 4589, 4597

S
 SBR4504, 4514, 4558
 SEG4513, 4564, 4569, 4607
 SEI4550, 4572
 SEI-Sinudyne4514
 SKY4514
 SSS4508, 4553
 Saba4536, 4545, 4575
 Sagem4598
 Saisho4502, 4503, 4550, 4569
 Salora4545, 4559
 Sampo4512, 4515, 4519
 Samsung4502, 4508, 4512, 4514, 4515, 4523, 4524, 4529, 4551, 4564, 4569, 4578, 4593, 4595
 Samsux4515
 Sandra4563
 Sansei4583
 Sansui4585
 Sanyo4503, 4513, 4526, 4542, 4544, 4562
 Schneider4514, 4565, 4579, 4607
 Scimitsu4508
 Scotch4551
 Scotland4545
 Scott4508, 4551, 4552, 4553, 4567
 Sears4517, 4521, 4523, 4542, 4543, 4544, 4549, 4551, 4552, 4618
 Seleo4545, 4561
 Semivox4553

Semp4543
 Sencora4502
 Sentra4565
 Serino4598, 4563, 4584
 Sharp4513, 4515, 4531, 4546, 4610, 4611
 Shintoshi4514
 Shogun4508
 Shorai4572
 Siemens4514, 4560, 4573, 4574
 Signature4505
 Silva4563
 Silver4513
 Simpson4555, 4556
 Sinudyne4550, 4572
 Sky-Worth4514
 Solavox4545
 Sonitron4562
 Sonoko4502, 4514
 Sonolor4545, 4562
 Sontec4514
 Sony4500, 4503, 4513, 4528, 4590, 4605
 Sound & Vision4580
 Soundesign4551, 4552, 4553, 4555
 Soundwave4514, 4582
 Spectricon4501
 Squareview4549
 Ssangyong4502
 Standard4502, 4564, 4565
 Starlite4553
 Stenway4565, 4571
 Stern4545, 4561
 Strato4514, 4569
 Stylandia4564
 Sunkai4572, 4576
 Sunstar4502, 4514, 4579
 Sunwood4514
 SuperTech4563
 Supra4523
 Supre-Macy4516
 Supreme4500
 Susumu4565
 Sylvania4509, 4512, 4521, 4533
 Symphonic4549, 4553
 Sysline4514
 Sytong4563

T
 TMK4523, 4550, 4551
 TNCi4506
 TVTEXT 954593
 Tandberg4577
 Tandy4515, 4526, 4531, 4545, 4564, 4565
 Tashiko4513, 4564
 Tatung4501, 4514, 4522, 4526, 4564
 Teac4502, 4514, 4569, 4571, 4581, 4582, 4584, 4607
 Tec4564
 Technics4518, 4568, 4605
 Technol Ace4552
 Techwood4501, 4518, 4523
 Teknika4505, 4508, 4515, 4521, 4523, 4524, 4530, 4540, 4552, 4553, 4555
 Telefunken4523, 4534, 4536, 4575, 4601
 Telegazi4514
 Telemeister4514
 Telesonic4514
 Telestar4514
 Teletech4502

Teleton	4513, 4555, 4561, 4564
Television	4563
Temco	4572
Tennessee	4514
Tensai	4565, 4572
Texet	4563, 4565
Thomson	4536, 4601, 4627
Thorn	4514, 4526, 4557, 4558, 4590, 4592
Tokai	4502, 4514, 4545
Tomashi	4571
Toshiba	4513, 4524, 4525, 4542, 4543, 4591, 4625
Tosonic	4554
Totevision	4515
Trans Continens	4564
Tristar	4558, 4565
Triumph	4550
Tsoschi	4571
U	
Uher	4561
Ultravox	4514, 4563
Unic Line	4514
United	4514
Universal	4511
Universum	4514, 4569, 4578
Univox	4514, 4545
V	
Vector Research	4512
Vestel	4514
Victor	4513, 4520, 4568, 4605
Videologic	4565, 4563
Videotechnic	4564
Vidikron	4521
Vidtech	4508, 4513, 4551
Viking	4516
Vision	4564
Vistar	4561
Voxson	4545
W	
Waltham	4564
Wards	4505, 4508, 4509, 4510, 4511, 4512, 4521, 4523, 4528, 4533, 4546, 4551, 4552
Watson	4514
Watt Radio	4563
Wega	4513
Wegavox	4502
White Westinghouse	4514, 4563, 4585, 4599, 4600
Windstar	4571
X	
Xrypton	4514
Y	
Yamaha	4508, 4512
Yamishi	4564, 4571, 4584
Yokan	4514
Yoko	4514, 4564, 4569
Z	
Zanussi	4561
Zenith	4505, 4506, 4530, 4585, 4600
Zonda	4501

レーザーディスクのセットアップコード
SETUP CODES FOR LASER DISC
SETUP-CODES FÜR LASER-DISCS
CODES DE REGLAGE POUR DISQUE LASER
REGOLAZIONE CODICI PER DISCHI LASER
AJUSTAR CÓDIGOS PARA DISCOS LÁSER
INSELCODES VOOR LASERDISC
INSTÄLLNINGSKODER FÖR LASER DISC-SPELARE
 鐳射影碟播放機設置代碼
 鐳射影碟播放機設置代碼

A	
Aiwa	2507
C	
Carver	2502, 2505, 2510
Cyrus	2511
D	
Denon	1111, 1112, 1113
Disco Vision	2500
F	
Funai	2507
G	
GoldStar	2503
H	
Harman/Kardon	2505
Hitachi	2500
M	
Magnavox	2505, 2509
Marantz	2502, 2505
Mitsubishi	2501
N	
NAD	2501
O	
Optimus	2501
P	
Panasonic	2508
Philips	2502, 2505, 2511
Pioneer	2500, 2501
Polk Audio	2505
Q	
Quasar	2508
R	
Radiola	2511
Realistic	2507
Renaissance	2510
S	
Salora	2502
Samsung	2510
Sega	2500
Sony	2504, 2506
T	
Technics	2508
Telefunken	2501
Theta Digital	2505
Y	
Yamaha	2509

DVDのセットアップコード
SETUP CODES FOR DVD
SETUP-CODES FÜR DVD
CODES DE REGLAGE POUR DVD
REGOLAZIONE CODICI PER DVD
AJUSTAR CÓDIGOS PARA DVD
INSELCODES VOOR DVD
INSTÄLLNINGSKODER FÖR DVD
 數碼視頻影碟播放機設置代碼
 數碼視頻影碟播放機設置代碼

A	
Afreey	2039
Aiwa	2022
Akai	2015
Apex	2028, 2049
B	
Bush	2035
D	
Denon	0000, 0001
E	
Emerson	2014
F	
Fisher	2027
G	
GE	2003
Go Video	2044
Gradiente	2023
H	
Harman/Kardon	2013, 2041
Hitachi	2012, 2025
Hiteker	2028
J	
JMB	2037
JVC	2010, 2017
K	
Kenwood	2000, 2006, 2032, 2048
Konka	2043, 2045, 2046, 2047
L	
LG	2014
Lecson	2038
M	
Magnavox	2001, 2030
Marantz	2007
Microsoft	2003
Mitsubishi	2002
N	
NAD	2036
O	
Onkyo	2001, 2016, 2018
Optimus	2011
Oritron	2023
P	
Panasonic	2000, 2020, 2031
Philco	2035
Philips	2001, 2007
Pioneer	2004, 2011, 2020
Princeton	2029
Proline	2024
Proscan	2003

R	
RCA	2003, 2011, 2042
REC	2034
Realmagic	2029
Roadstar	2034
S	
SM Electronic	2035
Sampo	2039
Samsung	2012
Sanyo	2027
Sharp	2019
Sherwood	2021
Sony	2005
T	
Teac	2011
Technics	2000
Techwood	2036
Theta Digital	2011
Thomson	2003, 2009
Toshiba	2001
U	
Universum	2014
W	
Wesder	2040
Wharfedale	2033, 2038
Y	
Yamaha	2000, 2008
Yamakawa	2026
Z	
Zenith	2001, 2014

カセットプレーヤーのセットアップコード
SETUP CODES FOR CASSETTE PLAYERS
SETUP-CODES FÜR CASSETTEN-PLAYER
CODES DE REGLAGE POUR LECTEURS DE CASSETTE
REGOLAZIONE CODICI PER RIPRODUTTORE A CASSETTE
AJUSTAR CÓDIGOS PARA REPRODUCTORES DE CASSETTE
INSTELCODES VOOR CASSETTESPELERS
INSTÄLLNINGSKODER FÖR KASSETTBANDSPELARE
 卡式錄音座設置代碼
 卡式录音座设置代码

W
 Wards1501
Y
 Yamaha1507, 1508

A
 Aiwa1502, 1516, 1517
 Akai1525, 1529
 Arcam1506
C
 Carver1502
D
 Denon0000
F
 Fisher1505
G
 Garrard1527, 1529
 Grundig1502
H
 Harman/Kardon1502, 1514
I
 Inkel1503, 1504, 1528
J
 JVC1521, 1522, 1523
K
 Kenwood1503, 1504
M
 Magnavox1502
 Marantz1500, 1502
 Memorex1509, 1510
 Mitsubishi1525, 1529
 Myryad1502
O
 Onkyo1511, 1512, 1524
 Optimus1501, 1518, 1528, 1529
P
 Panasonic1519
 Philips1502
 Phonotrend1528
 Pioneer1501, 1509, 1510, 1518
 Polk Audio1502
R
 RCA1501, 1518
 Revox1502, 1515
S
 Sansui1500, 1502
 Sanyo1505
 Sherwood1528
 Sony1513, 1520, 1526
T
 Tae Kwang1529
 Teac1525, 1527
 Technics1519
 Thorens1502
V
 Victor1521, 1522, 1523