

**DCM-390/290/27 DCD Player Wireless Remote Controller IR Data**

System Address(C1-C5):00010, Expanded Bits(C12,C13):10

CH	Data (C6-C11)						Name of button	Printing of RC-1033
	C6	C7	C8	C9	C10	C11		
C1	1	0	0	0	0	0	0	0
C2	0	1	0	0	0	0	1	1
C3	1	1	0	0	0	0	2	2
C4	0	0	1	0	0	0	3	3
C5	1	0	1	0	0	0	4	4
C6	0	1	1	0	0	0	5	5
C7	1	1	1	0	0	0	6	6
C8	0	0	0	1	0	0	7	7
C9	1	0	0	1	0	0	8	8
C10	0	1	0	1	0	0	9	9
C12	0	0	1	1	0	0	+10	+10
C13	1	0	1	1	0	0	PROGRAM	PROGRAM
C16	0	0	0	0	1	0	OPEN/CLOSE	OPEN/CLOSE
C17	1	0	0	0	1	0	CLEAR	CLEAR
C18	0	1	0	0	1	0	CALL	CALL
C19	1	1	0	0	1	0	TIME MODE	TIME
C20	0	0	1	0	1	0	REPEAT(ALL)	REPEAT
C21	1	0	1	0	1	0	A-B	A-B
C23	1	1	1	0	1	0	DIRECT	DIRECT
C24	0	0	0	1	1	0	AUTO SEARCH F	>>
C25	1	0	0	1	1	0	AUTO SEARCH REV	<<
C26	0	1	0	1	1	0	MANUAL SEARCH F	>>
C27	1	1	0	1	1	0	MANUAL SEARCH REV	<<
C28	0	0	1	1	1	0	PLAY	>
C29	1	0	1	1	1	0	PAUSE	
C30	0	1	1	1	1	0	STOP	■
C34	0	1	0	0	0	1	DISC SELECT	DISC SELECT
C42	0	1	0	1	0	1	RANDOM	RANDOM
C43	1	1	0	1	0	1	DISC SKIP(+)	DISC SKIP +
C46	0	1	1	1	0	1	DISC SKIP(-)	DISC SKIP -
C51	1	1	0	0	1	1	POWER ON	
C53	1	0	1	0	1	1	DISPLAY SELECT	DISPLAY
C64	1	0	1	1	1	1	POWER OFF	

**Detail of RC-1033**

Name of button			CH number		
		open/close			C16
1	2	3	C2	C3	C4
4	5	6	C5	C6	C7
7	8	9	C8	C9	C10
0	+10	CLEAR	C1	C12	C17
DIRECT	PROGRAM	CALL	C23	C13	C18
DISC SELECT	DISC SKIP(-)	DISC SKIP(+)	C34	C46	C43
RANDOM	REPEAT	A-B	C42	C20	C21
DISPLAY	PAUSE	TIME	C53	C29	C19
<<	PLAY	>>	C25	C28	C24
<<	STOP	>>	C27	C30	C26

**RC-1033**

