

Thank you for purchasing DENON's product. When you operate the unit, please read the owner's manual and this sheet.

page 27 : **Change**

Menu map

Setting items	Detailed items		Description	Page
Network	Other Network	Zone Management*	Display and control a maximum of 10 DENON devices that are connected to the same network.	34

* Item name has been changed.

page 33 : **Addition**

Party Mode Function

A function has been added when playing back in party mode that enables attendees to perform controls such as selecting songs etc.

 
Also, DENON products that are connected to the network can control each other.

Participating in the party mode as an attendee

1 Press [MENU].
Turns on the Menu settings mode and the Menu appears on the display.

2 Press $\Delta \nabla$ to select "Network" – "Party Mode" – "Start Party" from the menu, and then press [ENTER], \blacktriangleleft /|| ENTER> or \blacktriangleright .

When the party mode starts, "Party Mode Attendee" appears on the attendee's display, after which the organizer's playback information appears.



Party Mode Display Attendee Display

• Press \blacktriangleleft to display the organizer's input source.



3 Press $\Delta \nabla$ to select the input source, then press [ENTER], \blacktriangleleft /|| ENTER> or \blacktriangleright .

4 Press $\Delta \nabla$ to select the item you want to play, then press [ENTER], \blacktriangleleft /|| ENTER> or \blacktriangleright .



The party mode function can only be used on a combination of DENON devices that are equipped with the party mode function.

page 34 : **Addition**

Zone Management Function

The "Device Control" item was added to the "Network" – "Other Network" – "Zone Management" menu.

With "Device Control", the network functions (Internet radio etc) of the device selected in step 3 can be controlled using this unit.

1 Press [MENU].
Turns on the Menu settings mode and the Menu appears on the display.

2 Press $\Delta \nabla$ to select "Network" – "Other Network" – "Zone Management" from the menu, and then press [ENTER], \blacktriangleleft /|| ENTER> or \blacktriangleright .


• The status of up to 10 other DENON devices connected to the same network can be displayed.

3 Press $\Delta \nabla$ to select the device, and then press [ENTER], \blacktriangleleft /|| ENTER> or \blacktriangleright .

4 Press $\Delta \nabla$ to select "Device Control", and then press [ENTER], \blacktriangleleft /|| ENTER> or \blacktriangleright .

The network menu of the other person is displayed on this unit's display.

5 Press $\Delta \nabla$, [ENTER], \blacktriangleleft /|| ENTER> or \blacktriangleright to select the desired track.

 

• For information about how to operate, see the Owner's Manual provided with the product.



The zone management function can only be used on a combination of DENON devices that are equipped with the zone management function.

NOTE

The volume of the selected device can be controlled using this unit, but the volume level is not displayed. Be careful not to increase the volume too high.