

**DENON S-52 IR CODE**

09 January 2008

D&M Holdings, Inc./ Denon Brand Company

Ver.01

FORMAT : KASEIKYO

DATA CONSTRUCTION 48bits

Maker Code (C <sub>0</sub> C <sub>1</sub> )	Byte 1	Byte 2
DENON(3254H)	00101010	01001100

Key No.	Name	Genre1 (D <sub>0</sub> )	Genre 2(D <sub>1</sub> )	DATA Code (D <sub>2</sub> )	Parity (D <sub>p</sub> )	Byte 3	Byte 4	Byte 5	Byte 6
KEY 1	SLEEP	SYSTEM (5H)	CLIENT (8H)	SLEEP (031H)	4BH	00001010	00011000	11000000	11010010
KEY 2	ON/STANDBY	SYSTEM (5H)	CLIENT (8H)	POWER ON/STANDBY (003H)	68H	00001010	00011100	00000000	00010110
KEY 3									
KEY 4									
KEY 5									
KEY 6	INTERNET RADIO	SYSTEM (5H)	CLIENT (8H)	(CLIENT)INTERNET RADIO (063H)	6EH	00001010	00011100	01100000	01110110
KEY 7	RADIO	SYSTEM (5H)	CLIENT (8H)	(CLIENT)TUNER(toggle) (053H)	6DH	00001010	00011100	10100000	10110110
KEY 8	iPod	SYSTEM (5H)	CLIENT (8H)	(CLIENT)iPod (057H)	2DH	00001010	00011110	10100000	10110100
KEY 9	PC MUSIC	SYSTEM (5H)	CLIENT (8H)	(CLIENT)PC MUSIC (064H)	1EH	00001010	00010010	01100000	01111000
KEY 10	CD	SYSTEM (5H)	CLIENT (8H)	(CLIENT)CD (052H)	7DH	00001010	00010100	10100000	10111110
KEY 11	USB/AUX	SYSTEM (5H)	CLIENT (8H)	(CLIENT)AUX(toggle) (056H)	3DH	00001010	00010110	10100000	10111100
KEY 12	PLAY/PAUSE	SYSTEM (5H)	CLIENT (8H)	PLAY/PAUSE (00AH)	F8H	00001010	00010101	00000000	00011111
KEY 13	STOP	SYSTEM (5H)	CLIENT (8H)	STOP (00BH)	E8H	00001010	00011101	00000000	00010111
KEY 14	PLAY MODE	SYSTEM (5H)	CLIENT (8H)	PLAYMODE (035H)	0BH	00001010	00011010	11000000	11010000
KEY 15									
KEY 16	VOLUME+	SYSTEM (5H)	CLIENT (8H)	VOLUME+ (004H)	18H	00001010	00010010	00000000	00011000
KEY 17	DISPLAY	SYSTEM (5H)	CLIENT (8H)	DISPLAY(/TIME) (032H)	7BH	00001010	00010100	11000000	11011110
KEY 18									
KEY 19	VOLUME-	SYSTEM (5H)	CLIENT (8H)	VOLUME- (005H)	08H	00001010	00011010	00000000	00010000
KEY 20									
KEY 21	FAVORITE	SYSTEM (5H)	CLIENT (8H)	FAVORITE (03CH)	9BH	00001010	00010011	11000000	11011001
KEY 22	CURSOR UP	SYSTEM (5H)	CLIENT (8H)	cursor up (020H)	5AH	00001010	00010000	01000000	01011010
KEY 23	MUTE	SYSTEM (5H)	CLIENT (8H)	MUTE (006H)	38H	00001010	00010110	00000000	00011100
KEY 24	<</-	SYSTEM (5H)	CLIENT (8H)	<</- (042H)	7CH	00001010	00010100	00100000	00111110
KEY 25	PUSH ENTER	SYSTEM (5H)	CLIENT (8H)	ENTER (024H)	1AH	00001010	00010010	01000000	01011000
KEY 26	>> /+	SYSTEM (5H)	CLIENT (8H)	>> /+ (041H)	4CH	00001010	00011000	00100000	00110010
KEY 27	PRESET RADIO	SYSTEM (5H)	CLIENT (8H)	PRESET RADIO(MEMORY) (040H)	5CH	00001010	00010000	00100000	00111010
KEY 28	CURSOR DOWN	SYSTEM (5H)	CLIENT (8H)	cursor down (021H)	4AH	00001010	00011000	01000000	01010010
KEY 29	RETURN	SYSTEM (5H)	CLIENT (8H)	BACK(/RETURN) (025H)	0AH	00001010	00011010	01000000	01010000
KEY 30	DIMMER	SYSTEM (5H)	CLIENT (8H)	DIMMER (033H)	6BH	00001010	00011100	11000000	11010110